

Figure 6-7. *Accessing the Serial Monitor*

After clicking the Serial Monitor button, a new window will open and begin displaying anything that it happens to be receiving from the serial connection to the Arduino interface board, as shown in Figure 6-8.

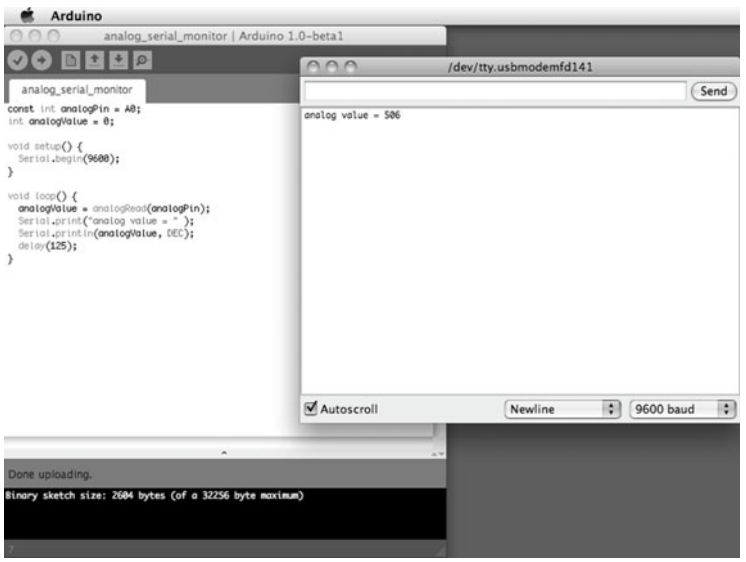


Figure 6-8. *Serial Monitor window*