

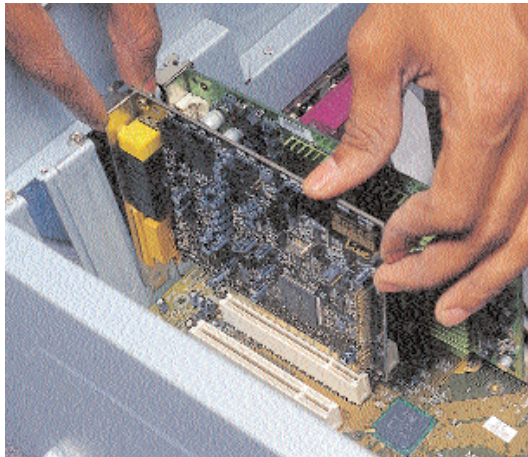


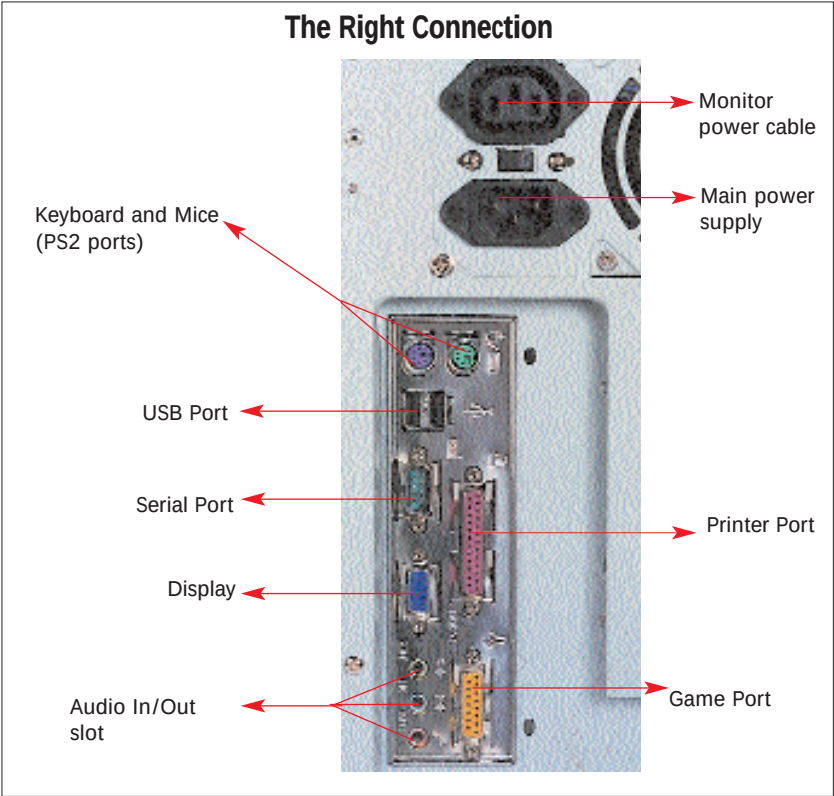

Installing the soundcard into an empty PCI slot

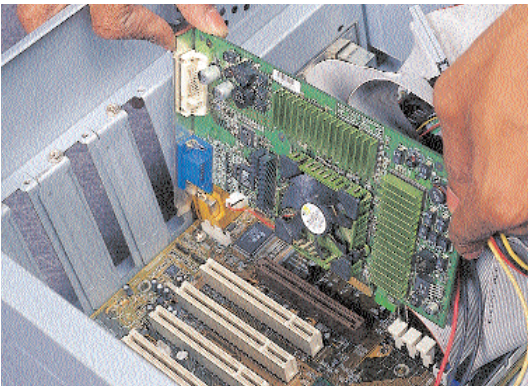

Installing the AGP card

Attaching the display card and the soundcard: The display card you buy should be a decent AGP accelerator of the TNT2 class. An AGP slot is usually a small brown-coloured slot and an AGP Pro slot is slightly longer. Gently insert the AGP 3D accelerator card in the slot until it is firmly fixed to the slot and fasten it with the screws provided at the outer end of the card. Do not try to force it on or you may damage your card.

Insert the soundcard to an empty PCI slot. This is a white slot. Insert the soundcard and follow the same procedure as you did for the 3D accelerator card. So also for any kind of LAN or modem cards that you might be fixing on the motherboard.

Connecting the monitor/keyboard/mouse: You will find two cables running from the monitor: one goes to the display card, has a connector at the end and sports a 15-pin interface.

Pr Rating on AMD Processors

AMD is going to market its newer desktop series of processors using Pr ratings (Performance Ratings). This is being done because clock frequency (measured in MHz) is no longer considered an accurate measure of CPU performance. Pr ratings use a system wherein a standard set of configuration and benchmarks are used to evaluate system performance so as to get a real-world measure of performance. For example, an AMD Athlon 1.33 GHz processor will be badged as an Athlon 1500+ processor. This indicates that the Athlon 1500+ has a performance equivalent to a Pentium 4 1.5 GHz processor.

The other cable goes to the power supply and has a three-pin interface. Connect these cables to their respective sockets. Next, connect the keyboard and mouse to the PS2 ports of the computer. If you are using a USB input device, you will have to connect it to the USB interface provided on the motherboard.

Setting up CMOS

Before doing this, check if all the components are in place and there are no loose screws lying in the system. Just before you power your machine, make sure that the DIP switches on



The first Boot

your system are configured properly to allow changing of settings through the CMOS itself. Switch on your computer and check if the power LED lights up. Check if the processor fan is spinning and listen to the number of beeps. These beeps will help you identify problems in the system. Refer to the motherboard manual for the number and duration of these beeps to analyse the problem such as loose connections and others. Next, make your floppy or CD-ROM drive bootable so you can boot using your CD-ROM drive and start your operating system setup. 