


Reviving your

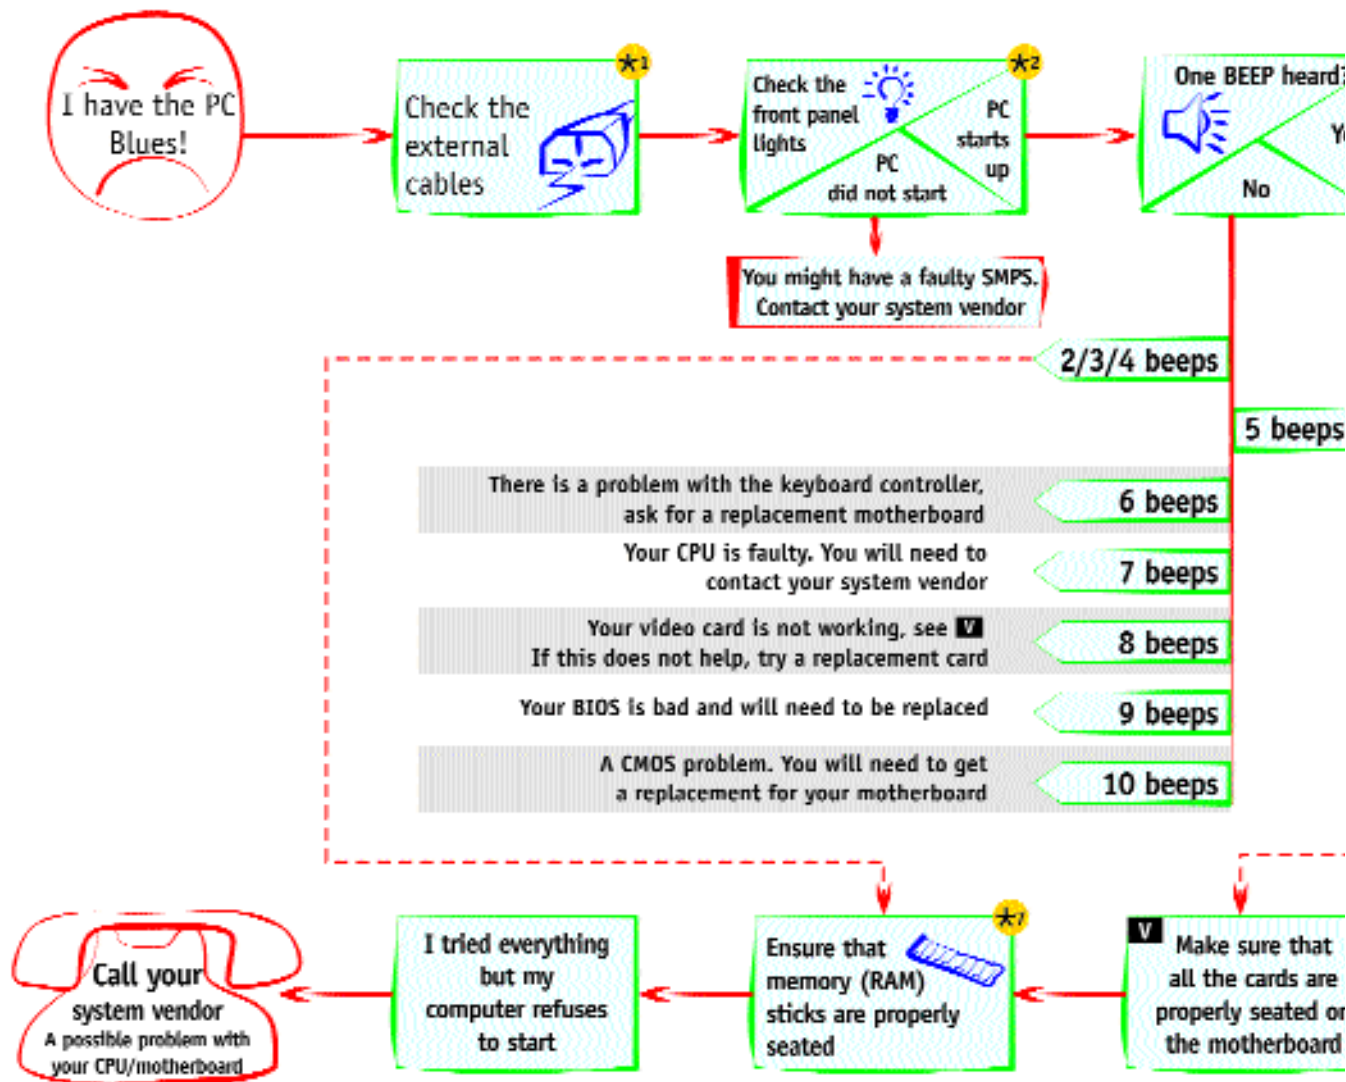

Look here for additional information:

- ★1 Check for blown fuses. Ensure that ALL external cables are properly connected.
- ★2 Ensure that the hard disk access indicator and the PC power indicator on the cabinet are lit.
- ★3 1. If there is a keyboard error, try reinserting the keyboard wire. If this doesn't work, you will need to get a replacement keyboard.
2. If the system does not boot from your hard drive, do the following to make sure that the hard disk is properly configured:
Restart the PC and press (Delete) to enter the BIOS. Check the boot order: boot from the primary master drive first. Use the 'Autodetect' feature and choose the parameter against which there is a YES featured—if your hard disk is not detected here, you will have to open the BIOS and manually configure the hard disk.
- ★4 Check the AT/ATX supply cable connecting the power supply (SMPS) to the motherboard.
- ★5 Ensure that your hard disk data and power cables are properly connected. If they are, swap the power cables with another cable. Do the same with the data cable.
- ★6 Try changing positions of the PCI cards and RAM modules, since the slots might be damaged.
- ★7 If you have more than one RAM module, try inserting them one-at-a-time. Also see ★6