

the paper that will be trimmed off or bound into the bind of a book. Set this option only if you plan to bind the pages. You can set it to be on the top or on the left of the page.

You can also choose the Page Orientation. It can be Landscape or Portrait. In Landscape prints, the width is more than the height. For Portrait prints, the height exceeds the width.

Troubleshooting Inkjet Printers

If horizontal or vertical lines appear on your printouts, the first step would be to run the print head cleaning utility three or four times. In most cases, this solves the problem. Check the paper if the printouts appear faint. The paper should not be damaged, old, or loaded incorrectly. If you use speciality paper such as photo paper, make sure you're printing on the correct side. Also, check the printer's manual for information regarding the compatibility of the paper with the printer.

To unblock a cartridge's print head, place the print head in a shallow bowl of hot water for 20 to 30 minutes. This will soften the dried ink so that it flows through the print head. You should see the ink bleed out. Repeat if necessary. Next, insert the cartridge into the printer, and run the print head cleaning utility. If soaking the cartridge in water hasn't cleaned and dissolved the dried ink, place the print


head part of the cartridge in a shallow bowl containing a mixture of very hot water and bleach (or ammonia) in equal amounts—just enough to cover the print head, for two or three minutes. This should hydrate the dried ink, causing it to flow through the print head, and the ink should bleed out. Repeat if needed. Now, insert the cartridge into the printer, and run the printer's print head cleaning utility.

Laser Printers

Streaks appear on printouts when the drum cleaning blades make improper contact with the drum surface. These blades are made of rubber, and so require replacement. If the streaks look like thin pencil lines, the drum itself has scratches, and must be replaced. Try cleaning the drum with alcohol. Wipe it gently with a soft tissue. If this doesn't work, you have to change the drum. Do check the Fuser unit, where the toner is fused with paper. Be careful, as this may be very hot. You will need to clean the upper heat roller, which is usually black in colour.

Sometimes, a brand new cartridge may not work properly. A reason for this could be that there is no pool of ink at the exit port (the pre-chamber) that the built-in print head can suck from. Some of the sponge-filled cartridges can develop air pockets at the

bottom of the cartridge that can block the flow of ink. Wrap the cartridge in a towel or cloth, and place it in a plastic bag. Hold it in your hand, with the head or exit ports pointing down. Extend your arm, and swing the cartridge down towards the floor rapidly, as if you would if you were to

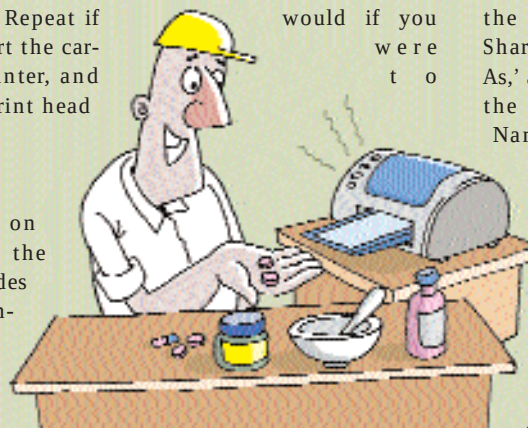

throw it. Repeat this a couple of times. Then, remove the cloth wrapping. There should be a visible spot of ink from each chamber. Repeat if there isn't. Now, place the cartridge back in the printer.

Network Printing

■ Installing Network Printers

In order to access a shared printer on a network, you need to install it first. You can install any number of printers on your machine. You'll need to first locate the computer that has put the printer up for sharing, using Network Neighbourhood. Right-click on the printer icon within that computer and click Install. Alternatively, double-click the printer

icon—this will bring up the Add Printer Wizard. Follow the on-screen instructions to install the network printer.

■ Sharing a local printer

If you want to share the printer that's connected to your computer, go to **Control Panel > Printers**. Right-click on the printer icon, and click Sharing. Here, select 'Share As,' and type in the name of the printer in the Share Name field. Click OK.

■ Controlling network printing

If your computer has Windows 98 and the print server is running Windows NT or 2000, you don't have much control over the printing process. One solution to this would be to install a Remote Procedure Call Print Provider (RPCPP). To install RPCCP, insert your Windows 98 installation CD into your CD-ROM drive, go to **Start > Settings > Control Panel** and double-click Network. From the configuration tab, select Add. In the 'Select Network Component Type' dialog box, choose Service and then click Add. Then click Have Disk. In the 'Copy Manufacturer's File From' box, type in 'E:\tools\reskit\netadmin\rpcpp' (where E is the drive letter of your CD-ROM). Then click OK. Click OK again after the installation, and reboot your machine.

After you've done this, you'll be able to choose the remote printer to send your