

enough, you can run newer versions of Linux that have the drivers for your motherboard and graphics card. These distributions are available on the DVD provided with the August 2003 issue of Digit.

Faulty CDs

Q. I have a Compaq Presario with a Pentium III 1 GHz processor, 256 MB RAM and 20 GB hard disk running Windows XP. Recently, I got a book called *Red Hat Linux 8 Bible*, which bundled three CDs for installing the operating system. Whenever I try to install Linux from these CDs, it gives me an error message that says, "The second stage of the install which you have selected does not match the boot disk which you are using. This shouldn't happen and I am rebooting your system now". Can you help me solve this problem?

Amita

A Unfortunately, you can't—not using those CDs at least. The problem is that your CDs have the publishers edited version of Red Hat 8 with incorrect file sizes. What you can do is download the correct version from <http://www.wiley.com/legacy/compbooks/errata/redhatpubed/>.

You don't even need to do that; just get the Digit August 2003 issue that has a DVD, with the best Linux distributions, including Red Hat 9.

Misinformation

Q. I have a problem with the Frontech Classycam digital camera that I bought about two weeks ago. My computer is a Pentium 4, 1.5 GHz with 256 MB RAM running Windows XP. It said on the box that the camera works with Windows XP, but when I installed the driver provided with the camera, I got a warning that the



The Frontech Web site clearly states that there are no Classycam drivers for Windows XP

A Boot for a boot

Q. When I create a bootable CD using Nero, the system prompts me to insert the bootable Windows 98 CD. So I need to make, is a bootable Windows 98 CD. How should I go about doing this?

Atul Jain

A To create a bootable Windows 98 CD, you need the Windows 98 installer CD, as well as a bootable floppy handy. What you need to do is insert the bootable floppy, and then start Nero. Select CDROM (Boot) as the type of CD to create and specify A: (or whatever your floppy drive is called) in the 'Bootable logical drive' box. Copy the



ILLUSTRATIONS: Farzana Cooper
'win98' folder from the Windows 98 installer CD to your new compilation, add any files that you want and write the CD.

software was not designed to work with this OS, and may not work. I decided to continue installation anyway.

Now, when I try to download pictures, I get a series of five errors, starting with 'Failed to get USB device'. Can you please tell me the solution to this problem?

Abhinav Sharma

A Looks like you've been duped! The Frontech Classycam does not offer drivers for Windows XP, nor are any available on the Internet. In order to use this camera, you're going to have to connect it to a machine running Windows 98, 2000, or Me.

Never shuts down

Q. I have a Pentium III, 800 MHz processor with an 810e motherboard, 128 MB RAM, and two operating systems—Windows 98 and Windows XP. The problem is that my Standby option has been greyed out, and if I select Shut down, the computer just restarts. The problem exists in Windows XP only, and not with Windows 98. I even checked the power options in the BIOS and Control Panel—they all seem to be OK. Then, I tried to disable restart from **System Properties > Advanced > Startup & Recovery**, but got the Error; "0x0000007E (0xC0000005, 0xFC7F1945, 0xFC9589B0, 0xFC9586B0) kbdclass.sys - Address FC7F1945 base at FC7F1000, DateStamp 36d82f3". I have to reboot in Windows 98 just to shut down. What should I do?


Nitin

A In Windows XP, the computer reboots automatically when a fatal error occurs. If that fatal error only occurs when you're shutting down, the system reboots automatically. If you haven't changed any of the system failure settings, you should be able to see the error in the Event Log—right-click on My Computer and go to **Manage > Event Viewer > System**.

This can also occur if the Logitech iTouch software version 1.5, or earlier is installed for some Logitech keyboards, such as the Cordless Freedom models. Install the latest iTouch drivers from www.logitech.com.

No can hear

Q. I have a Pentium 4 with 128 MB RAM and a 40 GB hard disk, running Windows Me. About a month after installing Power Screensaver Builder, I began facing a problem with the sound. I got an error message that said "MMSYSTEM266 the device could not be loaded, verify that the driver is installed correctly". I tried

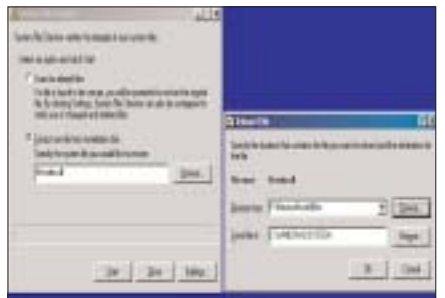

Use System File Checker to replace missing system files