

Tips and Tricks



Ink Cartridges

If you are installing a new cartridge in your inkjet printer, keep it in an upright position for a few moments before fitting it in. This ensures that the ink will be at the nozzle when you are ready to use the printer.


Also, store the cartridge in an upright position, in an air-tight plastic container. If you feel that your prints are not as crisp as they should be, run the printer's head-cleaning utility. This is necessary if you are using your printer after a long time.

Using the Right Paper

The regular paper that you use for printing, ILU, is good enough for day-to-day print jobs. However, at times, you may want to print on special types of paper. Different types of paper are available for different printing needs.

Photo Paper

This is similar to the paper used by film developers, and is designed to produce high-quality images. They come in both matte and glossy finish, and in standard photo sizes. Use photo paper for studio quality photos.

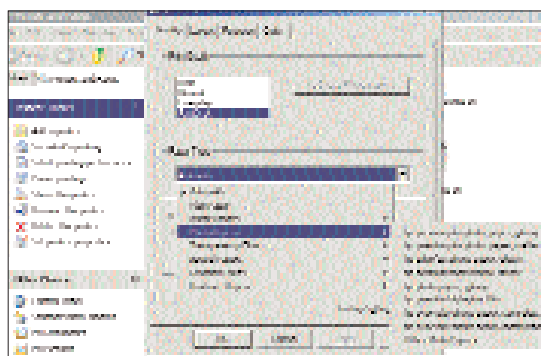

Selecting the correct photo paper from the list can give amazing results especially while printing images

Printing marked selection

When printing selected text, say on a Web page, select the text, and go to **File > Print**. If you're using Internet Explorer 5 or higher, choose to print 'Selection' in the dialog

box that pops up. Most of the newer browsers have the Print Preview in the File menu.

This feature can be very useful if you want to print only selected pages. Use the Print dialog box in Internet Explorer to choose what you want to print. Decide upon the pages that you want to print in the Print Preview dialog box, and then click 'Print...'.

Now in the Print dialog box, enter the page numbers and click OK. This procedure is practically the same for most browsers, including Netscape.

Page setup

Most printing software provide you with a 'Page Setup' feature. This lets you determine how your page is going to print. The first thing that you can set is the margin. This is the distance of the printed material from the edge of the paper. When printing formal documents, you should leave a bigger margin—especially on the left.

If you want smaller margins, remember that you can't set it to zero because your printer just isn't capable of printing from the corner of a page. Thankfully, most applications are smart enough to warn you if you try to do so.

Next, you can set the gutter width—a blank space on the paper that will be trimmed off, or be lost while binding a book. Set this option only if you plan to bind the pages. You can set it to be on the top or on the left of the page.

You can also choose the Page Orientation—landscape or portrait, depending on the orientation you want. Landscape is when a document is wider than it is longer, and portrait is the format that this page you're reading is in—height more than width.

Schumacher





TRUE 4800 DPI RESOLUTION • 5 PL INK DEGRITS • MICROFINE DEGRIT TECHNOLOGY • VIVID PHOTO TECHNOLOGY • 12 PPM MONO/9 PPM COLOR • LOW ON RUNNING COST • 3 YEARS WARRANTY
 Call Canon at 1800 33 33 66 or visit www.canon.co.in

The i255 is extremely fast in printing text, as well as images, due to its high density, multi-nozzle print head designed for high speed printing.

Rediffusion DYE/CANON/197