



Keep The PC Out Of The Picture

Using a PictBridge printer to bypass your PC for printing photos

Aalaap Ghag

Here is something that actually leaves the computer out of the cluttered loop of printing photographs with a digicam. PictBridge standardizes the manner in which printers interact with digital cameras. Earlier, when you wished to take a printout directly from a digital camera, you had to ensure that the printer was of the same brand as that of your digital camera. With hardware equipped with PictBridge, you no longer need the PC for a printout of the photos. You can directly print them from a printer using your digital camera, keeping the computer out of the picture.



To take full advantage of PictBridge, both your printer and the digicam must sport the PictBridge logo. In the example here, we used an HP PhotoSmart R707 digital camera to print using a Kodak EasyShare Printer Dock.




Shoot

First things first: grab that camera and go trigger-happy.



One end of the PictBridge cable to the cradle...

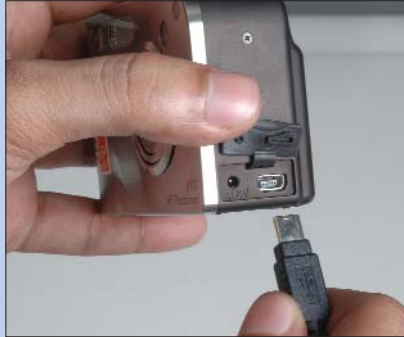

...The other end goes to your camera

STEP 2 Connect

Find your PictBridge cable. It is essentially a USB cable. Take the smaller end of the cable and plug it into your digital camera. The other end goes into your printer's PictBridge port. Ensure that the devices are powered on and that the printer has sufficient paper. See to it that the battery of the digicam is sufficiently charged.



Choices

Once the HP camera is connected to a printer, it shows up directly on the printing menu. You can choose to print just one picture, a



Access the Print menu of your camera



No PictBridge?

Here is another way of printing photos without using a PC. Some printers come with reader slots for SD, MMC, or CF memory cards. Your digital camera supports at least one of these. If your printer has such a slot, simply take the card out of the camera, and put it into the printer. Now, select the pictures on the printer's LCD panel and get your photos printed.



Print

Click on the Print button on your camera and your printer gets to work. If you can't find the Print button on the device model, simply refer to the manual. If you use a Kodak camera with this printer dock, all you have to do is to click on the Print button on the dock itself. For HP cameras, the Print button is on the digicam.



Photos without the PC!

1 Year Subscription at just Rs 600

நம்பவே
முடியாலை!

Turn to page 125

