



This dialog box lets you enable or disable hibernation

A Since you are using a Pentium 4 processor, it is likely that your motherboard supports advanced power saving features. Therefore, you need to update the motherboard drivers, assuming you had installed them earlier. If you haven't, install them now! Restart your PC after the drivers are installed. This should solve your problems.

The registry editor may not be working because of a data corruption of either the regedit.exe or some other support file. We suggest you re-install the operating system from a different medium. Go to the Administrative tool on the Control Panel, check the Event Viewer there to scan the log. In this way, you can identify the problem associated with restart.

Missing Memory

Q I have an Intel Celeron 2.4 GHz processor, with an on-board 32 MB S3 Graphics ProSavage chipset with 256 MB RAM. But in both my OSes, the System tab in the Control Panel shows 224 MB of RAM instead of 256 MB. How can I resolve this?


Abhay Rana

A Your video system is on-board, and is using 32 MB of your system's 256 MB memory as graphics memory.

Can't Boot

Q I have a PIII 800 MHz PC with 256 MB SD RAM and two 40 GB hard disks. My computer shows my partitions as follows: C: Samsung primary; D: Seagate primary; E: and F: Samsung extended; G:, H: and I: Seagate extended; J: CD-ROM. I have set up the Samsung as the primary master and the Seagate as the primary slave. I have installed Windows 98 on C: and XP on E:. When I removed my second hard disk, I couldn't boot into XP, as the E drive swapped with D. What should I do?

Purujit Deore

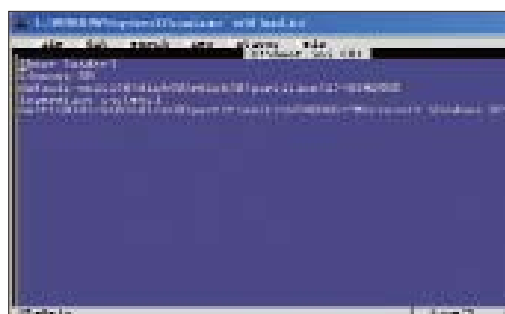

Locate the Windows XP partition entry in boot.ini

A This is happening because the settings in the boot.ini file are no longer correct, now that you have removed the Seagate drive.

What you can do is edit boot.ini. To do this in Windows 98SE, click Start > Run, then type cmd and press Enter. In the command prompt, type CD\ and press Enter. Now type Edit boot.ini and press Enter again.

This will open the boot.ini file, which will display partition information as shown in the screenshot. Here, you need to locate the Windows XP partition string. It looks like this: multi(0)disk(0)rdisk(0)partition(1)\windows="Microsoft Windows XP Professional"/fastdetect.

Take the digit next to the partition tag; subtract 1 from it, and save the file. You should now be able to boot into XP.

Of Bandwidth And Servers

Q I have a Reliance FWP (fixed wireless phone). I want to connect 20 PCs to this phone, 12 of which are Intel Pentium 4-based while the remainder are Pentium 3-based. I have six computers on the ground floor, six on the first floor, and eight on the second floor. The Reliance FWP has an inbuilt modem offering 115 Kbps of speed.

1. How do I make all the PCs run at 115 Kbps?
2. Does the length of the cable affect the speed of Internet browsing and downloading?
3. What is a server?
4. Can a phone with an inbuilt modem act as a server?
5. What are the components that I need to buy to connect all the computers effectively?

Krishnan

A 1. Computers sharing Internet connectivity provided by FWP can't go to 115Kbps. Even a single PC that connects at a supposed speed of 115Kbps doesn't offer more than 15Kbps.

2. The length of the cable must not exceed 1.5 metres for a CAT5 cable. Performance drops drastically as the length increases.

3. The FWP cannot act as a server.

4. To connect 20 computers spread over three floors, you need a Network Switch or Hub. One of the PCs will have to run WinProxy or some other Proxy server. Ideally, you need three network switches, one for each floor. This will shorten the length of cable running from the switch to the client system. ■

Getting started with your Hard Disc Drive?



Call 1600 33 11 04

