


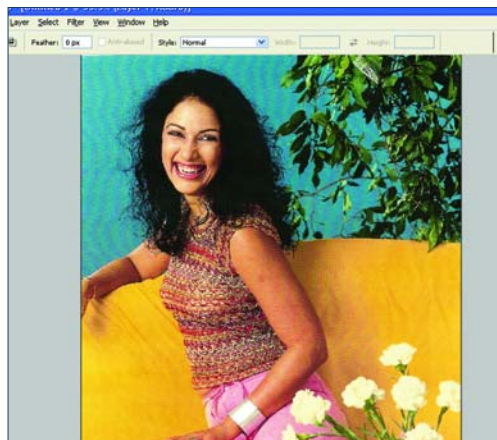

Tweak your images in Photoshop

software—Adobe Photoshop.

2 STEP Open Photoshop and go to File > Import. Here, you will see a list of the image acquisition devices that are installed on your computer.

Select your MFD's scanner from amongst these. It will probably be listed as something like 'WIA-xxxxxx', where 'xxxxxx' is your scanner name; or it will be listed as 'xxxxxx TWAIN' (an industry standard for scanning), where again, 'xxxxxx' is your scanner's name. If both are listed, select the TWAIN source.

3 STEP Clicking on that will get you to the driver interface for your scanner. Now, depending on your driver's abilities, you can adjust the scan size, quality settings,

image size, scan size, etc. If you want to print a large image, it's recommended that you scan at a higher resolution and then resize or crop, if required.

4 STEP Once you have imported the image into your image editing software, you can tweak it to your heart's content. You may want to adjust the colour, brightness, and sharpness, or even apply cool filters and effects to your image. If your image has the red-eye problem, correct it! If it's overexposed or underexposed, correct that



too! In fact, refer to the *Fast Track* book on digital photography that was given with the March issue of *Digit*. There are plenty of Photoshop tips and tricks in there.

Play with the menus and settings in Photoshop, and when you are pleased



The Epson Stylus PHOTO CX1500

with the results, continue to the next step.

5 STEP Once you are done with the editing part, simply go to File > Print. You will see the print dialog box, where you can select the printer you want to use (if you have a printer installed in addition to your MFD). Then, click the 'Properties' button.

6 STEP This will open the printer driver's interface, and allow you to tweak various image settings, such as image quality, paper quality, landscape or portrait mode, etc. Make sure you set the printer to print at high quality, and set the correct paper size, else you will mess up your photo paper!

Finally, just click 'Print', and watch as your tweaked photograph is printed! You now have your very own copy, which, may be better-looking than the original. ☑

varun_dubey@thinkdigit.com

►► Copying An Image

We've told you what you need to do to scan, edit and print a photograph. What if you do not want to edit it? If you simply want to copy it, and feel that the effort required—however minimal it may be—to scan and then manually click 'Print' is too much for your taste, all MFDs will let you copy images at the touch of a button!

To copy your image, simply place it on the scanner bed and press 'Copy'. The device will first scan the image and then print it.

But hang on! Before you go and starting wasting paper, keep a few things in mind. Just pressing the 'Copy' button may not give you the best image quality. It's fine if you just want to copy text and are going to use your device more as a Xerox machine than as a photo printer, but for photographs, you may need to tweak your printer settings a bit.

Most MFDs have an LCD screen—and some have a

colour LCD screen—where you can view and change settings.

Navigate to the printer settings on your device and select 'Photo Quality' from the print quality settings. Then navigate to the page setup and make sure your page size is set to the same size that you will be printing the picture on.

Note that if you have a 4 x 6 size paper, and an image much larger in size, you should also select the 'Scale to page' option. This will ensure that your photograph is resized, and that the print sizes of the image and the page match.

Some MFDs, such as the Epson RX630, come with memory card readers—so you can just take your memory card out of the camera and plug it into the MFD. You can view the LCD to edit and print the image! Some other MFDs also let you do basic image editing, such as cropping, rotating, resizing, and even increasing and decreasing brightness and contrast!