


My Computer Is Deaf!

Q While recording a program on a TV-Tuner card through cable on my PC, it only records video and not audio. However, while watching TV, both video and audio work properly. My PC configuration is as follows: Windows XP with SP2, P IV 3.2 GHz, 1GB of RAM, a Samsung 160 GB hard disk and an Asus TV FM Tuner card. I use InterVideo WinDVR to capture.

Dipak Pimple, Via e-mail

A While using video capture software such as InterVideo WinDVR, you need to specify the audio source if it is not automatically detected. To do so, open InterVideo WinDVR, right-click anywhere in the video window and click 'Setup'. Navigate to the 'Record' tab. Here, you will be able to select the audio source. Select 'Line-In' as the audio source.

The second thing to check is whether the Line-In volume of your sound card might be set to zero, or it might

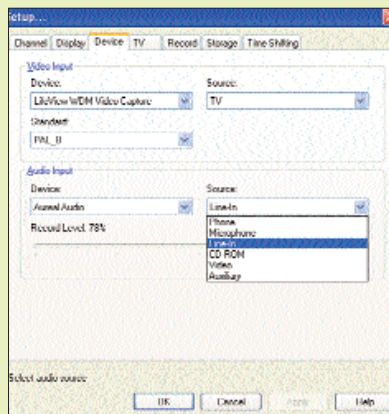

box next to Line-In, and raise the volume to a comfortable level. Close it and launch the PVR program, and under Options, check if Line-In is selected as the audio source. Also check its volume level there, if it exists.

even be muted. Before you use any third-party PVR software, ensure this is not the case. To find out if this is the problem, double-click on the volume icon in the system tray. See if the Line-In is low or muted. Now click **Options > Properties > Recording** and click OK. Check the

adapter and click 'Properties'. Now click 'Configure'. In the window that opens, click 'Advanced'. Against 'Link Speed/Duplex Mode', select different speeds one by one to see which works. Set the highest speed at which the network adapter works.

BIOS Gone Boom

Q I got the latest BIOS for my motherboard—an Asus P4S800-MX/s—from the Asus Web site, and used the Asus EZ Flash utility to flash it. Everything during the flashing process went well, and the computer said it was successful. But when I tried to reboot, I was unable to, and I had to use my support CD to try and recover my BIOS.

After erasing the BIOS while flashing it, it suddenly said there was a "data compare failure", and it stopped. I tried even older BIOS versions, but the same problem occurs. I used the Aflash utility, but nothing seems to work. Do I actually have to get a new motherboard? The error message that shows up on my screen is "BIOS ROM CHECKSUM ERROR."

Vinay Krishna, via e-mail

A Though this is a rare case, chances are your BIOS chip has developed a fault, and it needs to be replaced. If your motherboard is under warranty, you may avail of this, or else you can try to get the BIOS rewritten by a BIOS writer. Rest assured, there is no need to buy a new motherboard!

Sessions, Volumes, Tracks

Q My system is running Windows XP Pro (SP2). I want to know how I can access different volumes/tracks on a CD—that is, after creating a multisession CD, how can I access a previous session on the disk? I know the method in Windows 98, but that method doesn't work with XP.

Nishank Gupta, via e-mail



Get Help Now!

E-mail us about your computing problems along with your contact details and complete system configuration to sos@jasubhai.com, and we might answer them here! Since we get more mails per day than we can handle, it may take some time for your query to be answered. Rest assured, we are listening!

A Download the Windows 2000/XP version of Multimounter from ftp://ftp9.nero.com/attach/Multimounter_2k_xp.zip. Run Multimounter, and open the properties of your CD drive. Select the 'Volumes' tab. Each burn session will show up as a separate volume, with a checkmark indicating the volume presently active and accessible.

Select the volume or session you want to access, and click 'Apply'. You may need to refresh your Explorer window before the change shows up. You'll only be able to access one session at a time, not all the files at once.

Password Prompts

Q I have Windows XP Pro installed. Every time I log into Windows, I get a username and password prompt even though I haven't set a password. As a result, I need to press [Enter] every time I boot into Windows. Is there a way to eliminate the username and password prompt?

Ashish Rana, via e-mail

A You will need to edit the Windows Registry. Proceed only if you know what you are doing, because one wrong step could make Windows unbootable.

In the Registry editor, navigate to "HKEY_LOCAL_MACHINE\Software\Microsoft\WindowsNT\CurrentVersion\WinLogon". In the right pane, double-click on the string "DefaultUserName" and change the Value data to your username. (If the string is not present, create it.) Similarly, change the strings "DefaultPassword" and "DefaultDomainName" to your password and domain name respectively. Finally, delete the string "AutoLogonCount".

The next time you start Windows, you will not be asked to enter a username and password. ■