

In this issue, learn how to optimize your gaming experience, internet connection and boost your Windows startup time

You thought that pen drive was only for transferring files? Think again. Let us show you its hidden talents.

Android tablets going haywire, inaccessible drives, troubling AutoPlay....

System issues or failing gadgets never seem to deter the good folks of team digit and thinkdigit forum and they come to the rescue to troubleshoot the digital lives of our readers.

AutoPlay not working

I am facing an issue with my PC. The AutoPlay feature for various devices like CD or USB has stopped working. Earlier AutoPlay was working fine, but now whenever I plug in any device into the computer, nothing happens and I don't see the AutoPlay prompt. Please provide a remedy for my problem.

—Chinmoy Das

A To fix this, first head over to the Control Panel and search for AutoPlay. A list will pop up containing several types of media and devices. Tick the checkboxes for all the media or devices for which you want to enable Autoplay. Once you're done, click "Save". AutoPlay should now be enabled for your devices. If this doesn't work, Click the "Start" button. In the search box type "services.msc" and press Enter. In the list of services find "Shell Hardware Detection" and ensure that this service is running. If not, right-click on the service and start it. Right-click on the service again and select "Properties". In the "Startup type" drop down menu, select "Automatic" and click on the "OK" button. You can also search for "Microsoft Fix it 50475" online and download the Microsoft AutoPlay Repair Wizard. Use this tool and try to fix the problem. For more solutions to the issue, head here: digit.in/HelpAutoPlay

Tablet trouble

Hi, I have a problem with my Samsung Galaxy Tab 2 - 310.

Its specs are-

- 1Ghz processor. Power VR GPU
- Android 4.0.4

- 7" 1024*600 screen
- 4000mAh battery.


The problem is that it gets very sluggish at times and force reboots at least six times a day. Recently, red thick borders have starting flashing on the screen. So I am forced to reboot and factory reset my tablet a couple of times a day. Please help me fix this. I also wanted to know how can i overclock my tablet, and will it cause any kind of infringement or hiccups with my device?

—Rithvik Reddy Gaddam.

A Since your tablet reboots frequently, there seems to be something very wrong with it. If it's still under warranty, you should take it to your nearest Samsung service center and get it checked. The thick red flashing borders that you see sometimes is an outcome of Strict Mode on Android. Strict Mode is basically a developer tool that detects your device's disk read, write and network processes and tells you when apps do long operations on the main thread. In simpler words, whenever there is too much load on on your device's GPU, it brings them to your attention so that you can fix them. In order to get rid of this, just follow these steps:

- Open Settings > Developer Options;
- Scroll down a little bit and find the Strict Mode option;
- Uncheck or unmark this Strict Mode option;
- Restart your tablet

Overclocking a mobile device is always risky. Overclocking would normally require you to root your Android device which would void its warranty.

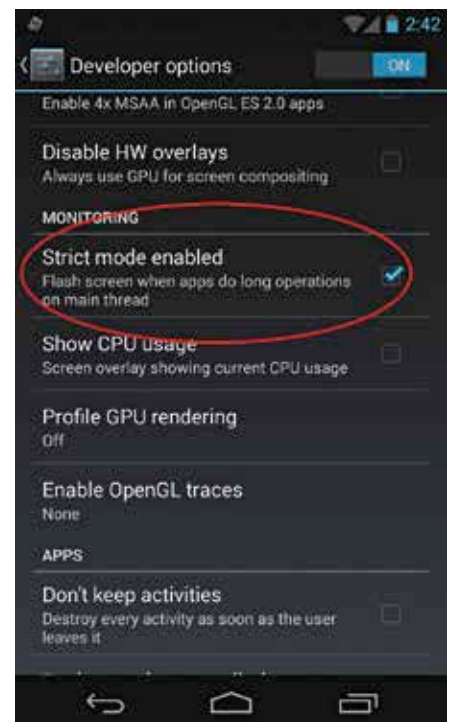

Disable Strict Mode from the developer options settings menu

You should only go about it if you know what you're doing as any wrong step may result in your device becoming useless. If you still want to go ahead with it you should check out www.xda-developers.com

Write protected flash drive

I am having a particular issue with my Transcend 4GB pen drive. Whenever I insert this flash drive in my PC, it shows me that the drive is write protected and bitlocker status is on. What to do? Please help me.

—Guru Prasath