


play as it contains two rows of 16 columns to display data, as in the table here.

The numbering of columns on an LCD start from the number (0,0) for first row and first column and is (1,0) for second row and first column.

We recommend you experiment with the set lcd.setCursor (0, 1) function with value like lcd.setCursor (1, 3), to understand how it works.

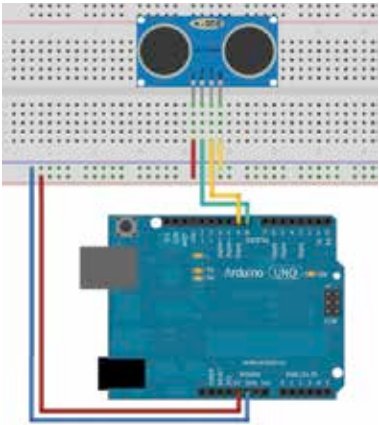

Circuit diagram for connecting Ultrasonic sensor

Measuring distance using Ultrasonic sensor

To measure distance using an ultrasonic sensor, we need to use the Ultrasonic library that isn't included in the default Arduino™ installation. The library can be downloaded from <http://dgit.in/UltraSonicDownload>

The Ultrasonic sensor is a transmitter-receiver pair that contains a transmitter which continuously transmits ultrasonic pulses. The ultra-

#define Trigger 8;	Pin connected to trigger pin of Ultrasonic sensor
#define Echo 9;	Pin connected to echo pin of Ultrasonic sensor
#include <Ultrasonic.h>	Include the Ultrasonic distance measurement library
Ultrasonic ultrasonic (Trigger,Echo);	Create an object 'ultrasonic' of class Ultrasonic defined in Ultrasonic library passing the parameters Trigger and Echo to the constructor
void setup () { Serial.begin (9600); }	Start serial communication with computer at a baud rate of 9.6 kbps
void loop () { Serial.print (ultrasonic.Ranging (CM)); Serial.println (" cm"); delay (1000); }	Display the distance measured by ultrasonic sensor by calling function 'Ranging' of Ultrasonic library
	Wait for 1 second (1000 milliseconds)