


5. Type 3000 MB x GPU Count in the “Maximum size (MB)” field (18000 MB for 6 GPU mining rig, 36000 MB for 12 GPU).
 6. Click “Set” and “OK”. Then “Apply”.
- Restart the mining rig

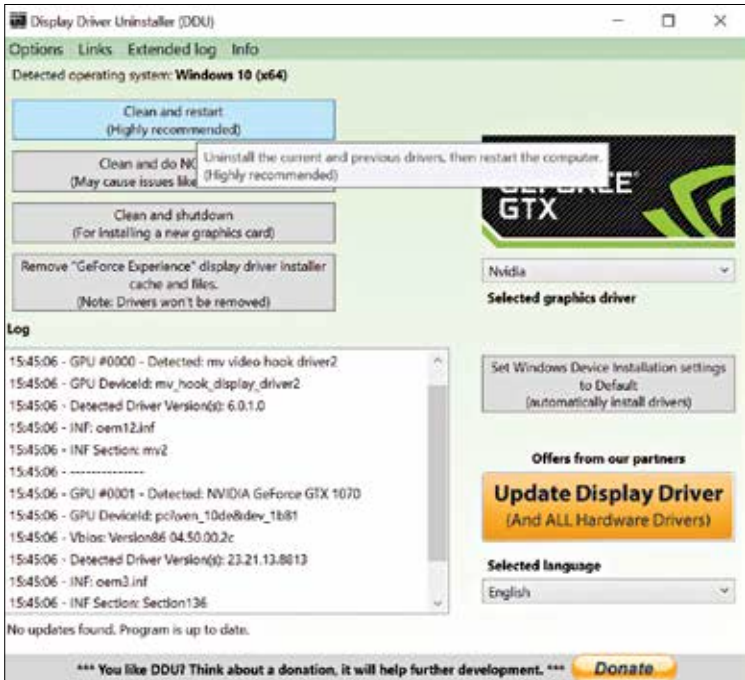

GPU Drivers

After Windows has been fully installed, use DDU to delete your existing driver and prevent Windows from installing GPU drivers automatically. This is necessary to prevent Windows from installing an out-of-date driver. It will request that you operate in “Safe Mode”, although this is not required.

Simply select “Clean and restart” when the software is launched. We wish to obtain and install the correct drivers manually.

Installing other GPU Drivers

- Shut down your PC and connect to all of the other GPUs once you’ve