


Mining Driver Mode

Now that you have installed all the needed drivers, you are left with one last essential step.

- Go to Radeon settings.
- Click on gaming.
- Then click on Global Settings.

All of your GPU options are now visible. Each GPU will need to be

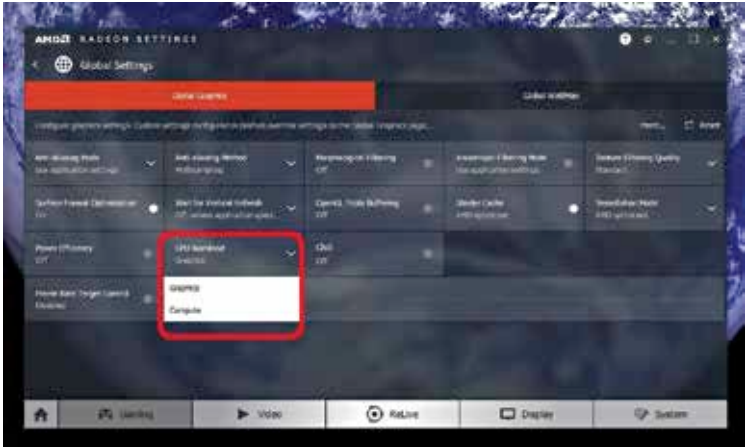

set to Mining (Compute) mode. By default, each GPU is in Graphics mode, and we'll need to change each GPU's "Global Graphics" "GPU Workload" to Compute from Graphics to enable appropriate mining (high hashrate due to DAG patch).

It will ask you to reload the AMD Settings each time you change one of the GPUs to Compute, which will take some time, but it's also possible that even after you've changed it, the GPU will still display "Graphics" instead of "Compute". To remedy this, try restarting your computer and see if the value was correctly saved.

BIOS Mod

When we talk about GPUs, each one has its own BIOS mod, which instructs it on how to operate. On your GPU, you'll come across four different types of memory: Samsung, Hynix, Elpida, and Micron.

You will only use GPU memory for mining Ethereum, which implies