

Do Not Disturb

Q When I try to hibernate my computer after using my TV-Tuner card, it goes into hibernation, but when I turn on the computer, an error is displayed: “Attention: Out of Range”, and the computer stops responding. I have to restart after that.

HarSachin Singh

A Your TV-Tuner sets the refresh rate of your monitor to a value that it cannot handle, hence the problem. First, download the latest drivers for your TV-Tuner from the manufacturer’s Web site, and get the latest version of DirectX available for your OS (from the Digit CD/DVD). To


fix the problem, you need to know the refresh rate that is normally used by your monitor. To find this, open Display Properties, click on the Advanced tab, click Settings, select the Monitor tab, and note down the refresh rate that has been chosen under the “Monitor settings” section. Now go to **Start > Run**, type in “DXDIAG” and press [Enter]. In the window that appears, click on the “More Help” tab and click the Override button. Select the “Override Value” radio button and enter, in the adjacent box, the refresh rate you noted down earlier. Click OK and then Exit for the changes to take effect. The problem you described should go away.

QUESTION
OF THE
MONTH

Mumbai). I also want to access my hard disk and the software loaded on the server.

Mehul Meruwalla

A We shall assume that you have Windows 2000/XP/2003 installed on both computers. The operating systems on the computers need not be the same. You need to do the following on the PC in your office: open System Properties from the Control Panel. Click on the Remote tab. Under Remote Desktop, check the box next to “Allow users to connect remotely to this computer”. Once this is done, you can remotely log into this PC from your home PC. To do this, at your home computer, go to **Start > All Programs > Accessories > Communications > Remote Desktop Connection**. The Remote Desktop Connection application will open. Type in the

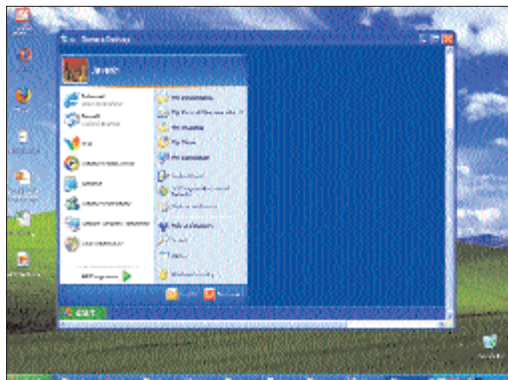

The Remote Desktop Connection in Windows XP

IP address of your office computer in the dialog box next to “Computer”. Click on Options, and in the expanded window, enter the username, password, and domain of the office computer. Click on Connect to log into the remote computer.

You can go one step further by clicking on the Local Resources tab. Here, click on Disk Drives, Printers, and Serial Ports, according to what you want.

When you select one of these (Disk Drives, for example), you will be able to view your local disk drives as additional drives on the remote computer after you have logged into that computer. You can transfer files between the remote PC’s hard drive and your local hard drive.

Just In Case...

Q I have a Pentium IV machine with Windows XP SP 2 running. I log into Windows using a password. But if I ever forget my password, how can I log into Windows?

Nirmalya Chakrabarty

A Download the file “cd060213.zip” from <http://home.eunet.no/~pnordahl/ntpasswd/cd060213.zip>. Extract the ISO file that is in this Zip file, and burn this image to a CD; this is a bootable Linux kernel image. Note that you need to burn it as an image of a CD rather than an ISO file on a CD. Set your computer to boot from the CD/DVD drive, insert the CD in the drive and reboot your computer. You will now boot from this CD, and all you need to do is follow the easy instructions to reset your Windows XP password.

Spaced Out

Q I have a Celeron 1.1 GHz processor and 128 MB of RAM. We use Windows XP, but after having installed AutoPatcher from the *Digit* July DVD, when I run any application, after a few minutes, a “denied instruction” box pops up and asks if it is OK to terminate the running application. I also get a message in the System Tray: “Windows - virtual memory minimum too low; your system is low on virtual memory. Windows is increasing the size of your virtual memory paging file. During this process, memory requests for some application may be denied.”

Kapil Agarwal

A This error appears when the hard drive does not have enough space to accommodate the Windows swap file. The swap file is usually present on the drive where Windows is installed (usually the C: drive). You should free up disk space on the drive by deleting unwanted files and uninstalling unnecessary programs. Alternatively, you can set the location of the swap file to a drive that has more free space.

To do this, open the Control Panel and double-click the System icon. In the Advanced tab, click on the Settings button under Performance. Click on the Advanced tab where you will see the Virtual memory heading. Click on Change, and in the window that opens, you can set the paging file to any location. ■



Get Help Now!

E-mail us your computing problems along with your contact details and complete system configuration to sos@jasubhai.com, and we might answer them here! Since we get many more mails per day than we can handle, it may take some time for your query to be answered. Rest assured, we are listening!