



should be enabled so that the graphics card can use compressed textures, which are faster to load. Enable Alternate Pixel Center to resolve problems such as text or texture anomalies in games. Leave this disabled unless you experience such problems. Under OpenGL, you can see two settings.

Triple Buffering should be enabled for OpenGL games to improve performance if VSync is enabled. The other OpenGL option available here is whether or not to force 24-bit Z-buffer.

VPU Recover

VPU Recover is similar to Windows Error Reporting, but it is only for the graphics related errors. If the graphics subsystem crashes for some unknown reason, Catalyst drivers will try to reset the graphics card so that you may continue to use your computer uninterrupted. If this is not possible, a software rendering mode will be used until the computer is

restarted. An error report is prepared and you can choose to send it to ATI as a bug report.


ATI OverDrive

Depending on your card, you may or may not see this option. As the name suggests, OverDrive option is for overclocking your graphics card to make it perform better. You need to first unlock

OverDrive by clicking on the lock icon and clicking OK when you get the on warning message. You will notice that the core and the memory speeds can now be adjusted by means of sliders. To determine a stable overclock automatically, click Run automated clock configuration utility button. CCC will slowly increase the core speed, and then will increase the memory speed until it reaches the levels that CCC deems as the maximum achievable. In reality, this is by no means the maximum achievable and you can try experimenting with higher clock speeds until you can go no further. Bear in mind that overclocking may damage your graphics card and will void its warranty, you have been warned. You can achieve higher clock speeds if you use a good third party VGA cooler. Overclocking the graphics card is necessary only while you play 3D games and therefore you should mark the checkbox next to this option. Make sure that you check the Preserve ATI OverDrive settings at logon box.

Crossfire

The Crossfire option is visible only if you have installed two ATI graphics card in Crossfire configuration. Check the Enable Crossfire box and make sure that Catalyst A.I. is enabled so that the drivers can automatically set the correct Crossfire mode according to the game being played. You will now be able to access additional anti-aliasing settings that let you use up to 14x anti-aliasing. Crossfire is still far from perfect and some games may experience glitches and crashes, in which case, it is better to disable it.

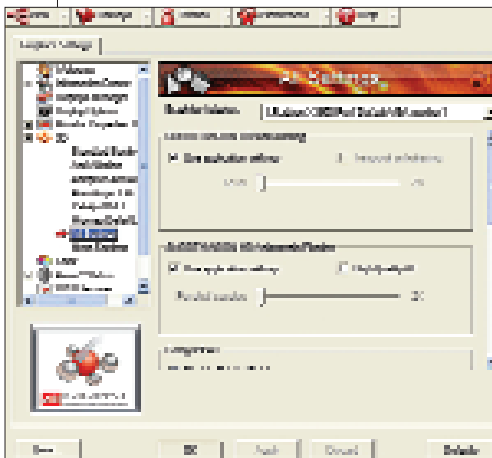

More 3D settings in CCC



NVIDIA nTune

Before you download nTune, make sure that your system meets the minimum requirements, which as follows: Windows XP/Vista (32-bit or 64-bit), Motherboard: a version of nForce motherboard other than nForce1, mobile edition or server class, Graphics card: any graphics card based on an NVIDIA chip. Of the above hardware, you should have at least the required motherboard or the required graphics card or both. Download and install nTune from www.nvidia.in. During installation, make sure you select all the options—nTune, nTune Service and nTune Stress Test.


Start nTune using either the program icon or you can open the NVIDIA Control Panel in the Control Panel and click on Performance in the left pane. Accept the EULA to begin using nTune.

Adjust Motherboard Settings

Click on Adjust Motherboard Settings in the left pane to enter this section. This page lets you adjust the system performance by changing various settings such as system clocks, memory controller timings, and system fan speeds (though not all settings will be available to you depending on your motherboard). This section is strictly for experts. Change any setting only if you know what you are doing, because one wrong setting may permanently damage your system. We recommend that you use the Tune System section instead.

Adjust GPU Settings

You can override the stock clock frequencies of the GPU and the graphics memory in this section. Select Custom clock frequencies radio button and increment the clock frequencies of the GPU core and the memory bus in steps of 2 MHz. Press the Test button to test the stability and increment again until the system freezes. Reboot the computer and use the second-last setting that worked. You still need to play a game for a long period to test the settings even further. If you don't experience crashes or heating issues, you're fine, if you do... lower the clock speeds. You may also want

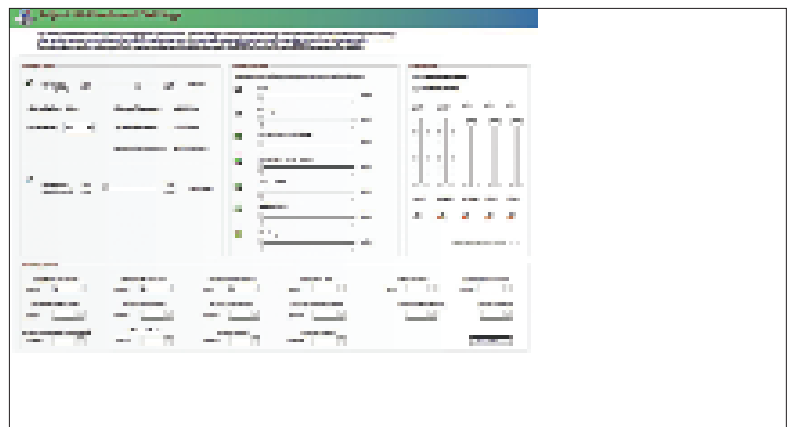

Adjust your motherboard's settings