



Valve's cease-and-desist

Valve's lawyers have issued cease-and-desist to CS:GO betting sites
digit.in/CSGOBetting



The Flux Capacitor!

British automobile journalist Jonny Smith's fastest electric car the 'Flux Capacitor!'
digit.in/FluxCapCar


Unable to get OTA updates, assembling a PC, dysfunctional ODD and more...

Personal technology can start acting up at the weirdest of times but lucky for you we're here to help.

Reset flash counter

I have a Samsung Galaxy Tab A (SM-T350). I recently rooted it to install CyanogenMod on it. But unfortunately, there was no ROM available, even on XDA. So I decided to Un-root it again with all the updates and all. I un-rooted using SuperSU but when I click on update, a window pops up that says "You have modified your system in an unauthorized way..." I reinstalled everything using Smart Switch on PC but still it's the same. I know that I have to change the parameters that appear when I boot to 'downloading mode' (Bootloader) that are 'custom' values to the value written at the time of manufacturing. But I don't know how. Please help. The tablet is running Android 6.0.1

—Adityan Singla

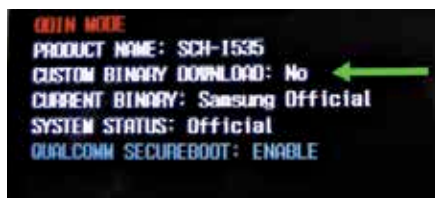

Reset flash counter to get updates

A On Samsung devices, you need to reset the flash counter back to zero. The flash counter keeps count of how many times the ROM has been written over. Since your OS is post 4.3 you should see "Custom Binary Download: Yes (xx Counts)" and you need to reset this counter to zero so that it says "NO". Follow the instructions given on this page (<http://digit.in/2aiXUst>) which highlights how to use Triangle Away to reset the flash counter. Do note that this isn't a procedure with a 100 per cent success rate. Once you get that done you'll be able to download updates OTA.

Making a PC

Hey, I'm assembling a PC and it would be my first time doing so. I have a lot of questions and it'd be great if you could answer my queries. I'm afraid that I might mess up something and lose thousands of bucks. So here's what I've decided to buy:

- Processor - Intel Core i5-6400,
- Motherboard - ASRock H170A-X1,
- RAM - G.Skill Ripjaws 4 DDR4 F4-2133C15D (2x4 GB),
- HDD - Seagate Barracuda ST100DM003 1TB,
- SSD - Kingston SSDnow UV300 120 GB,
- GPU - Gigabyte GTX 960 (4 GB),
- SMPS - Antec UP650p V2,
- ODD - LG GH24NSD1,
- Keyboard and Mouse - CM Storm Devastator,
- Monitor - BenQ RL2240HE,
- Cabinet - Antec X1-T Gaming,

If you have suggestions to change do let me know.

Could you please check this build and tell me if they all are compatible and if I can fit them all in my cabinet (Antec X1-T). This is my biggest concern, do let me know if there are any compatibility issues. I used your mid-range gaming rig in your magazine as reference and I found a website called Primeabgb. Is it fine to order components to NOIDA using this site? If not please suggest others.

Would I need to buy a heat sink? If yes, then please suggest one. Also, I was wondering that the cabinet already has cooling fans so do I really need a cooling system?

I'll be using <http://digit.in/OldBld> as a guide. Is it good enough? Are there any cabinet specific tutorials?

I'll be really grateful if you could help me with this. I found out that the fans in the cabinet is creating air flow... So is the processor really without the heatsink? I read online and it is supposed to have one



Assembled PC

but why is the unlocked versions box so thinner than normal? Also, please inform me if any of the above mentioned parts are not required. Though the build is in budget and I still have money to spare, I don't want any wasteful spending.

—Pulkit Singh

A Hey Pulkit, you're on the right path! Let's take a look at all your queries one by one. Yes, all of the above mentioned components will fit in the Antec X1-T. As for which shop to get your parts from, you can go with Primeabgb and they will ship your components to Noida. You will have to handle RMA yourself, that's all. As for the heat sink, the stock heat sink is more than sufficient for the Core i5 - 6400. You should regularly clean your heat sink every six months to ensure your temperatures are low. And re-seat the heat sink every two years while re-applying new thermal paste.