

Sync favourite destinations

Sync your tagged destinations between your web account and your smartphone with some simple and quick steps. In the Google Maps app, enter the address of any regularly visited destination, and select the star that appears on the top right corner of the Maps screen. This syncs the location with your Google account and can be retrieved from either your PC or your Android phone.

Quick directions

For a faster navigation, you can use the starred addresses to get directions on Google Maps. To do this, open your Google Maps app, select directions from the menu, select the icons at the end of Start point and End point. A list of starred destinations will



Faster directions

appear there. Select any of the starred destinations to make them starting or ending point for your navigation.

You can also select my location to the end point to navigate your way back to your hotel on a vacation.

GPS shortcuts

You can save locations you visit regularly, on the home screen. This way, you can screen your route considering traffic condi-




Setting navigation shortcuts

ties and the route type. To do this, tap and hold your finger on the home screen, and select Shortcuts from the Add to home screen menu. Choose Directions and Navigation. This sets your current location as the default starting point. All you now need to do is set the destination. You can give a name to this route, select an appropriate icon, and pin it to the home screen. The GPS icon on your home screen opens the route in Google Maps on tapping, along with the traffic details. In case you find heavy traffic, you can reroute by selecting the icon in the bottom right corner. This gives you three alternate options, which you can select for your navigation.

Security

Screen lock

Protect your device with pattern screen lock option; or PIN and password screen lock option on Android Froyo and newer versions of Android. You can do this by selecting 'Set Unlock pattern' from the Security menu under Settings. The available options are Pattern Lock: swipe a pattern on a 3*3 matrix.

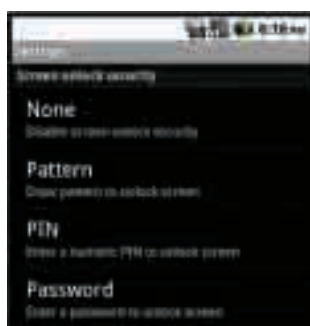

Setting Screen lock

PIN: Enter a numeric PIN to unlock screen.
Password: Enter an alphanumeric password to unlock the screen.

Protect passwords

Set a password to safeguard your web accounts from data theft. This acts like your master password that veils your credentials for other web sites. You can set this from the 'Set Password' option under 'Location and Security' menu in Settings.

Battery life


Background Data and Auto Sync

Disable the background data and auto sync options to conserve battery as running



Setting credential storage password

network processes consume substantial amount of battery over EDGE or 3G connections. This can be done by disabling the 'Background Data' option in 'Accounts and sync' menu of Settings.

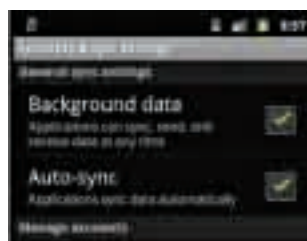

Setting background data

However, sometimes you want sync to be active. In such cases, you can trim the auto-sync interval from the menu options when the app is open.

GPS radio

Turn off the GPS radio unless absolutely necessary. You can do this by deselecting the Use GPS Satellites from Location settings.

Wi-Fi notifications

When within Wi-Fi range, Android, by default, notifies




GPS on/off Toggle

you of available networks in the notification area. Turn off Wi-Fi notifications from wireless and networks settings.

Animations

Live wallpapers and menu animations drain battery life.

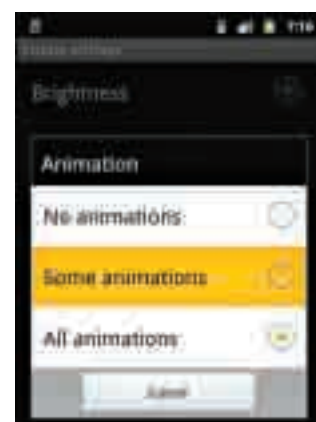

Animation settings