


1.5 Setting Up Your Digital Camera

It could be the first shoot of your life or a shoot on your trip, if you didn't take some time off to prepare before the shoot, chances are you'll feel the pinch when there's nothing you can do to correct it. Its always better to be safe than sorry, so here are a few things you should do before your first shoot, or before leaving on an excursion.

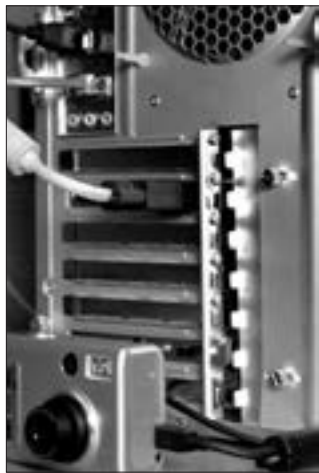

Digital cameras connect to your computer via the USB port

Charge your Batteries: For the first shoot, make sure that the camera batteries are fully charged. To get the maximum performance out of the batteries, always drain them before a recharge and don't start using the



camera before the battery is completely charged. If you're going out for a shoot, make sure that the spare batteries are also charged.

Batteries are the powerhouse for your digital camera...

Check Memory Space: It's a good habit to unload your memory card to your computer immediately after any shoot. It doesn't cause problems the next time you wish to go on a shooting spree.



TIP

Memory cards do go through wear and tear with time. So trusting all your pictures to one card with a huge capacity is a bad idea. Depending on the resolution and compression ratio you shoot at, use cards that hold about 80 images—so all won't be lost if the card takes a dive.