


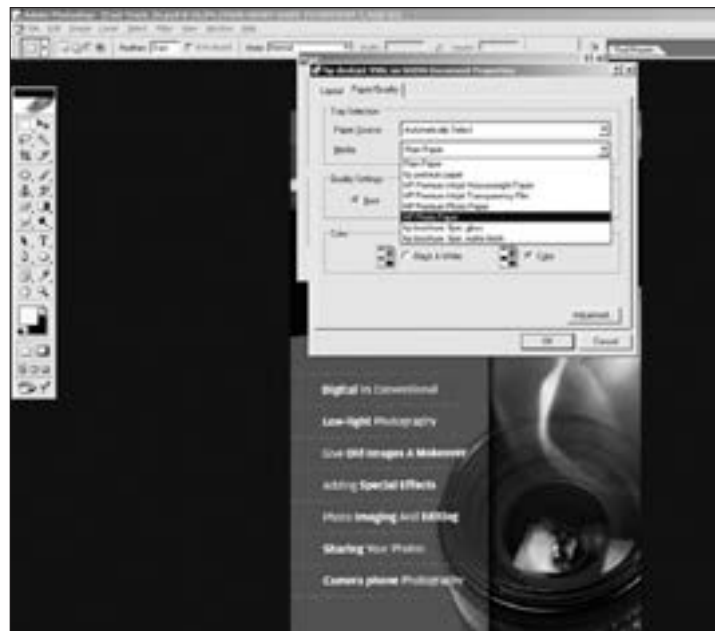

Adjust your printer's settings for optimal output on photo-quality paper

- Always select the proper paper type in the print preferences, or your printer will not print to the paper's optimum quality.
- If you are getting lines or bands in your prints, use the printer's utility functions to clean up the head and nozzle.
- Make sure your printer's colour ink cartridge has ample amount of ink left. Replacing a near empty cartridge can improve picture quality.



TIP

Turn off the Date Function on your digital camera, and any other such features that the manufacturer supplies. If you really want to remember when the photo was shot, use another method such as naming your digital file with the date in the name or, if worse comes to worst, writing the date down in a notebook as you are out shooting. The idea is to eliminate distracting elements whenever you can.