


Auto, Portrait, Landscape, Sports and Night. Auto mode is the general picture-taking mode. When you use this mode, the exposure, focus, and flash are set automatically. When this mode is active, there is usually a small camera icon on your LCD to indicate it. Portrait mode, usually shown on the LCD as a face, sharpens the subject and leaves the background out of focus.

Landscape mode is indicated by mountains on the LCD, and is suited for shooting subjects that are at a distance. Often, a slower shutter speed is chosen and hence, it's better to use a tripod while using this mode. The Sports or Action mode provides a faster shutter speed and is used to shoot fast moving objects. Night mode, as the name suggests, is used to shoot in poor light conditions. Since this also means longer exposures, use of a tripod is recommended.

Slideshows And Screensavers

To view your pictures as a slide show in Windows XP, open the images folder in Windows Explorer and click on 'View as slide show' under Picture Tasks in the Common Tasks area. Alternatively, right-click any image, select **Open With > Windows Picture and Fax Viewer**. Once the image is opened, press [F11] to start the slide show. You can also view this slide show as a screensaver. Right-click the desktop, select Properties and choose 'My Picture Slideshow' in the Screen Saver tab. Click on Settings to specify the folder and other settings.

In case you use Windows 98, or intend to create a screensaver file, use utilities such as Irfanview (www.irfanview.com). In Irfanview, click File > Slideshow, specify the

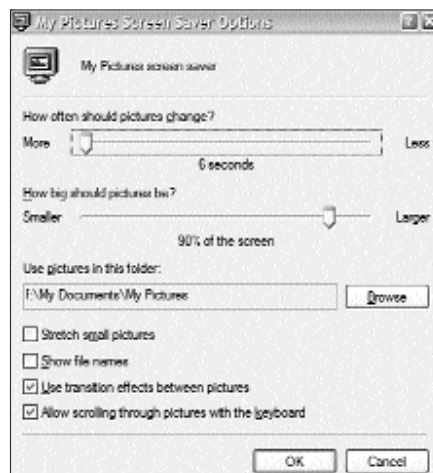

Use XP's 'My Pictures Screen Saver' option to view your photos as a screensaver