


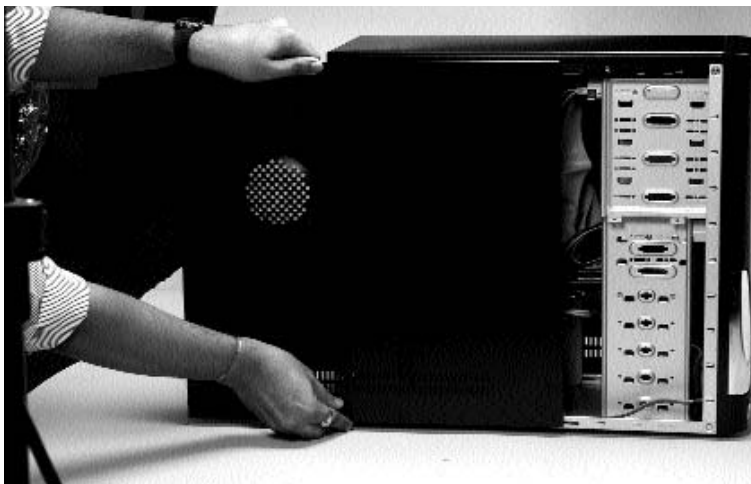

Slide the metal sleeve outwards in an ATX Case

desktop case: with some cases, you need not remove any screws—just press two buttons on either side of the case, and either slide the metal cover or pull it upwards. In some cases, you will have to remove screws on the back of the case while in others, you have to do both. As a precaution, check for screws at the back of the case.

Again, before you dismantle the case, make sure that you have disconnected all power cords and other component cables and isolated the case in a well-illuminated, static-free workplace.

Upgrading The CPU

Once you open the tower case and start peering, you may be scared by the collected dust and cobwebs—if this is the first time anyone has opened it in several years—and also by the devices inside. But fear not: you have this book for reference!

First off, clean the inside of the cabinet with a piece of cloth and a small blower or fan. Clean it to the point that you can look clearly inside the case. There will be lots of stuff inside the computer that you may or may not have seen before. However, let's assume that you haven't, and move to upgrading the CPU.