

Slot-type processors are secured by locks on the side that run along the breadth of the processor. It is necessary to remove this lock first and then pull out the processor from the slot.




Removing a slot processor

For processor upgrades, we will only dwell upon processors belonging to the Pentium II and above category. A system with a processor below this can be put to other uses: they can be used as dedicated Linux boxes, for Internet surfing, and for playing old DOS and Windows games. Upgrading these is not a good idea.

For Pentium II and Pentium III Slot processors, you can remove them from their slots as described above. Here's a list of steps for installing the processor:

1. Make sure the immediate periphery of the processor slot is empty. If there are capacitors lining the slot, make sure you don't apply force on them when installing the processor.

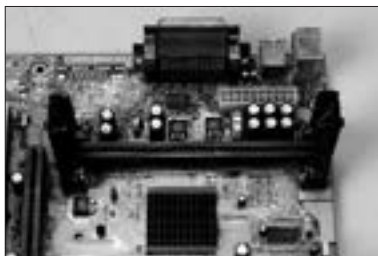

An empty PII/PIII processor slot

2. Align the processor with the notch on the slot. Insert the processor slowly at both ends and then gently push it downwards. The processor will automatically slide in, and the locks on either side will click into position.



Inserting a slot processor

3. Once installed, connect