


the fan power connector to the pin that has 'PWR_FAN' (this is the case across nearly all motherboards) imprinted near it. The exact placement of the word varies with different motherboards.

Before you upgrade the CPU, make sure you check the maximum processor speeds that the motherboard supports. Older motherboards that supported Pentium II 200 and 233 MHz processors were unable to support later versions of P2 processors. So you'll need to refer to the manual. Some motherboards had jumper settings on the motherboards with a table explaining the combinations for different speeds imprinted on the motherboard.

If you are missing the manual for your motherboard, you can do a search on the Internet with your motherboard model number as the keyword, and look for the manual. Else you can contact your hardware dealer.

With the Slot type of processors taken care of, let's move on to the Socket type of processors. There is some difference in the installation.

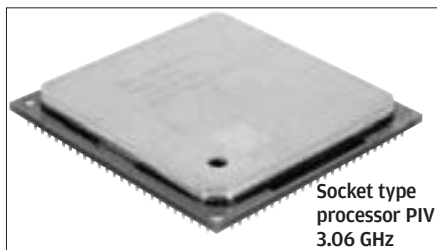

1. Remove the heat-sink by unclipping the locks on both sides of the processor. The images below show how to do this for both the Intel and AMD processors.
2. Once this is done, keep the heat-sink aside and look for the lever on the side of the processor socket. Gently pull it upwards.
3. Now take the new processor out of its box, apply some thermal paste on the top, and then place it in the socket. When placing the processor in the socket, note that the processor only fits in