


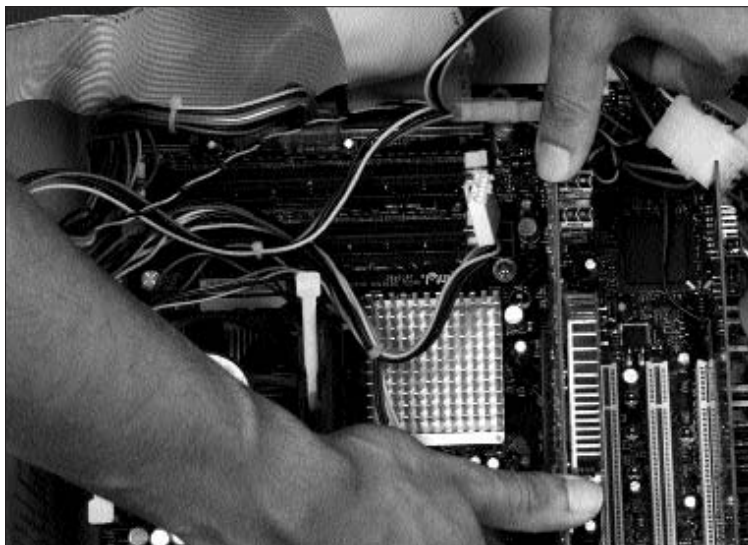

Insert the AGP card in the slot

3. After the installation is done, turn on the computer and check for the display. The computer should give a beep indicating that POST is complete, and the display should come on.
4. If, on starting the computer, you hear long beeps at regular intervals, the video card has not been installed properly. You will need to re-install it.