


4.3 Finding The Right Drivers For Windows

Windows XP can be inexplicably fickle about installing hardware. While older hardware is usually detected without any issues, hardware such as capture cards and external devices can be difficult to install. If you face such similar issues, then do the following.

1. Remove or re-seat the device or card from the computer. Do this after you have shut down the computer. Restart the computer and then see if the OS detects the device. If it does, go ahead and install the driver for the device. If not, then we will have to try some other tactics.

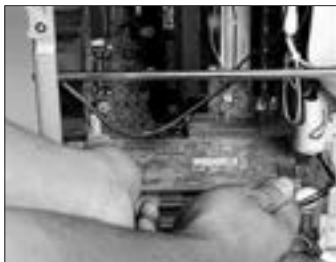

2. If your device is still not detected, go to **Start > Control Panel** and click 'Add Hardware'. Once you get there, click 'Next' and in the screen that appears choose the option 'I have already connected the hardware'.



3. Then Windows XP will search for the hardware. If it finds the hardware, you will be prompted for the drivers. If not, then you will be provided with a list of hardware from which you will have to choose.



4. Next, you will be asked to install drivers for the software.

Install the hardware and start the Add hardware Wizard in Windows XP