


on unless you are absolutely sure of what you are doing. An accidental short can just as easily fry the motherboard, RAM, display card or any other add-ons you may have.

1.4.1 The PC powers on (with/without beeps) but there is no display

1. After ensuring that the problem is not related to the PSU or the display card, it may be that the RAM modules are mismatched or are not seated properly. If the problem is with the RAM, you will most likely hear beeps emitted by the BIOS. See the BIOS section to understand beep codes and how to troubleshoot the BIOS. Check the RAM modules to see if they are seated properly. Also, try to use modules from the same manufacturer. In some cases, RAM modules from different manufacturers don't work together. Also check the memory section in this guide to troubleshoot RAM and memory.
2. The CPU may not be seated correctly. This problem should only be relevant if you have installed a new motherboard or upgraded the CPU.

Visually inspect to check if the socket CPU is sitting flat in the socket, which means that the heat sink should be perfectly parallel to the motherboard. With a new socket CPU the heat sink may completely cover the CPU and you will have to remove the heat sink to check. Check

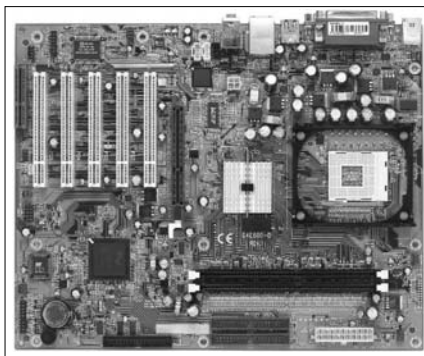

A Pentium IV motherboard

for any crushed or bent legs. If the CPU's socket locking arm was not raised up all the way up before seating the CPU or if it was not lowered all the way down after seating it, the CPU won't sit properly. If the CPU doesn't sit properly after this, then either the socket is faulty, or you have the wrong CPU for the motherboard!