


such ports and connectors. If your PC doesn't have such a port, you will have to buy a FireWire card and install it. Call your system engineer and ask for one!

If you have an older camera that's not FireWire-capable, you will need to have a TV-Tuner card, or a video card that has a video-in connector. These are usually S-Video and/or RCA connectors. Look at the pictures alongside to understand what each connector looks like. If your camera has S-Video-out capability, you can connect it to the S-Video input of your video capture card. If not, you will have to use the standard video-out of the video camera to connect to the video-in of your capture card.

Incidentally, if you do not have a video camera, but have some old VHS tapes that have all the memories you want to edit or just store in the digital format, the procedure is the same as that involved in using an older video camera with a video-out RCA jack. All you need to do is connect the video-out of the camera or VHS player to the video-in of your computer via the RCA jacks (generally yellow in colour), and then "record" the output of the camera using the video capture software that came with your capture card.

If you want the audio feed to also be recorded, you will need to connect the audio-out of the camera to the line-in port on the PC using the necessary cables.

When capturing and editing video, you need to make sure you have tons of free disk space, because raw video can be really large. For example, just half an

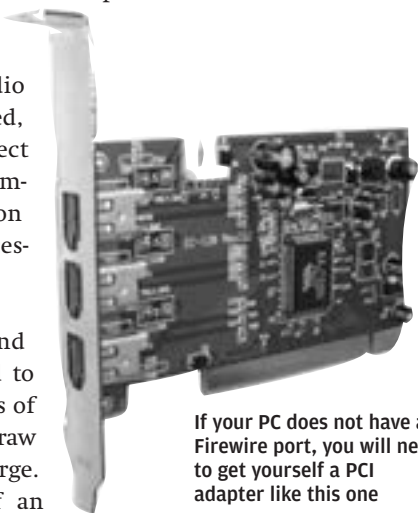

If your PC does not have a Firewire port, you will need to get yourself a PCI adapter like this one