

sound of it, it seems you have bought a PCI-Express card, which is a completely different standard, and it will not fit into your motherboard. You need to buy an AGP card. Look for a cheap GeForce 7600GT or maybe an ATI Radeon x1800 card.

Problem

Q My desktop configuration is as follows:

Intel 915 chipset, Gigabyte motherboard, 512 MB RAM DDR, 80 GB Hard disk, DVD writer, and my board supports up to 4 GB.

I recently bought Transcend (184p DDR DIMM 128 M*64) 1 GB RAM (64M*8 DDR400 3-3-3), and have installed it. I tried booting, but after power ON, I see nothing on the monitor, except hearing a ticking sound from the CPU. My old 512 RAM is Dynet DDR400(3) 512M*8


Salman Binali, Palakkad, Kerala

A There are chances of compatibility issues between different RAM sticks and that could be the problem. Unplug the older Dynet RAM and try to boot with only the new Transcend memory in place to see if it works. If it does, you're going to have to get another 1 GB RAM stick to run in dual-channel mode.

HDD Not Detected

Q I have 200 GB IDE Seagate HDD. I was using it on my computer, but then removed it. Now I'm trying to use it as an external HDD with a 2.0 external HDD case. It's showing in the device manager, but, it's not listed in My Computer.

I've also tried to connect it directly to the CPU as an internal HDD, but the same issue continues. Please suggest, as I have some critical data in it. I use Windows XP. And I have tried it in two different computers with NTFS partition.

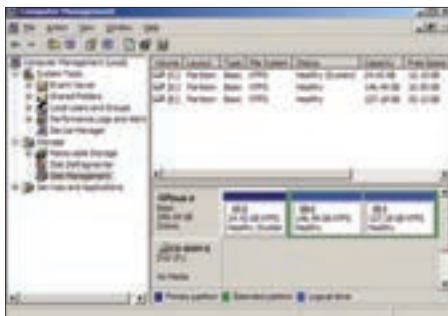

Computer Management displays all the disks and partitions on them

Tirtha Basu