

cles that adjust the size of the pupil to regulate the amount of light entering the eye. When your eye dilates, more light is allowed through the lens. Similarly, when the aperture of a camera opens up wide, more light is permitted from the lens to the sensor.


On the other hand, when the aperture shrinks, less light is allowed in.



Open means more light. Closed means less

Av Mode

Aperture priority mode – also known as ‘Av Mode’, where ‘Av’ stands for ‘Aperture Value’ – allows you to decide how big you want the aperture to be. Instead of the camera doing the thinking and changing the settings automatically, you can manually adjust the aperture to suit the subject matter. The camera then automatically adjusts the shutter speed and other exposure settings according to the lens aperture you have set. This ensures the correct exposure. Aperture priority is marked on camera dials by the letters ‘AV’ or ‘A’.

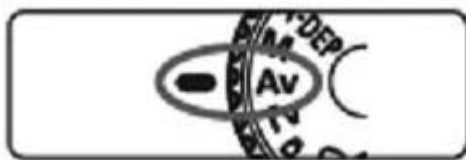

Dial ‘Av’ for Aperture Priority

The aperture value is displayed on the LCD screen of your digital camera, given as an ‘F’ number.