


- **Animation:** Opens a dialog where you can set whether you want to enjoy animated transitions for some effects (such as opening menus), for all supported effects (including when navigating from screen to screen), or to enjoy a phone without any optional animation effects (this setting does not control animation in all applications).
- **Screen timeout:** Opens a dialog where you can set how long to wait after you touch the screen or press a button before the screen darkens. For the longest battery life between charges, use the shortest convenient timeout.

## 5.6 Location and security settings

Use the Location & Security settings to set your preferences for using and sharing your location when your search for information and use location-aware applications, such as Maps. You can also configure settings that help secure your phone and its data.

- **Use wireless networks:** Check to use information from Wi-Fi and mobile networks to determine your approximate location, for use in Maps, when you search, and so on. When you check this option, you're asked whether you consent to sharing your location anonymously with Google's location service.
- **Use GPS satellites:** Check to use your phone's global positioning system (GPS) satellite receiver to pinpoint your location to within an accuracy as close as several metres ("street level"). Actual GPS accuracy depends on a clear view of the sky and other factors.
- **Set up screen lock:** Tap to configure your phone to require a pattern, PIN, or password to unlock your screen.
- **Set unlock pattern:** Opens a set of screens that guide you through drawing a screen unlock pattern.
- **Change unlock pattern:** When an unlock pattern is set, opens a set of screens you can use to change the unlock pattern.
- **Use visible pattern:** When an unlock pattern is set, check to draw lines between points in the unlock pattern you draw.

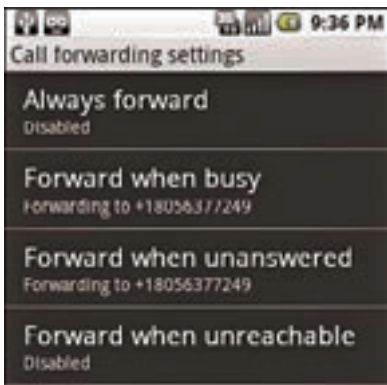

You can automatically forward your calls when busy