

to zoom in. This involves the stretch motion. Although pinch and stretch work with panoramas, these motions are most useful when you're in applications that aren't sized for your screen, such as Web pages. However, you can use them wherever you like.




Pinch and stretch

- ▶ **Double tap:** The double tap is where you touch the same button on the screen twice in rapid succession. You use the double tap to jump between a zoomed-in and a zoomed-out image to get you back to the previous resolution. This option saves you from any frustration in getting back to a familiar perspective. It's important to time the taps so that the phone doesn't interpret them as two separate taps.

The keyboard

The screen of the Windows Phone is important, but you'll still probably spend more time on the keyboard entering data on a small QWERTY keyboard. All Windows Phones come with a software keyboard; some come with a software keyboard and a hardware keyboard. The software keyboard automatically pops up when the application detects that there is a need for user text input. The keyboard appears at the bottom of the screen. For example, if you're searching for the Bangalore Art Museum

within Bangalore on Bing Maps, you tap the Search button, and the keyboard will pop up on the screen. In this case, a text box pops up in addition to the keyboard. As you tap out Bangalore Art Museum, the text appears in the box on the screen as if you had typed it on a hardware keyboard. When you tap the Search button, the keyboard disappears and the location of the Seattle Art Museum is highlighted on your phone. The phone is smart enough to know when the keyboard should appear and disappear. If your phone has a hardware keyboard, the software keyboard doesn't pop up automatically.

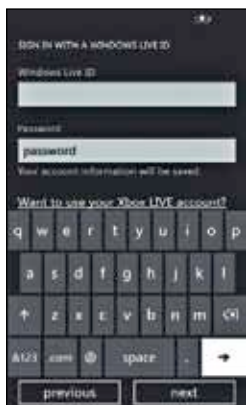

The onscreen keyboard