


Access Your Raspberry Pi Remotely with VNC

Raspberry Pi users who don't have a HDMI enabled monitor and want to remotely access its graphical desktop can set up a VNC server on Raspberry Pi and remotely connect to its desktop from an Ubuntu machine.

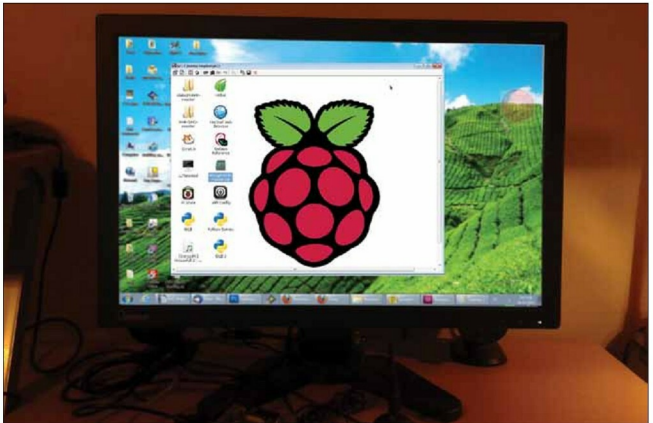

Raspberry Pi can be connected to a HDMI enabled monitor or TV to view the desktop of the Raspbian operating system. But if you don't have an HDMI supported device and would like to remotely access the Raspberry Pi graphical desktop, Virtual Network Computing (VNC) is the way to go. You would need to set up a VNC server on Raspberry Pi and remotely connect to it from your host via VNC viewer. I will describe the steps to set up the server.

1. After you have written the Raspbian image onto the SD card, place the Raspberry Pi in your local network and allow it to connect to the Internet via a router or modem. As you don't have display hardware for your Pi, use the Linux nmap (Network Mapper) utility to get its IP address on your network.

On your Linux host machine, e.g., Ubuntu, type the following command:

```
#sudo apt-get install nmap
```

Scan the IP addresses on your local network as follows:

```
#nmap -sV -p 22 192.168.1.1-255
```



Note: Use the IP address range which is compatible with your network (I am assuming that the network has a working DHCP server running).

The results will display every machine that can be identified on port 22. The Raspberry Pi (running Raspbian) may show up as follows:

```
Nmap scan report for raspberrypi.home (192.168.1.xxx)
Host is up (0.012s latency).
```