

files, lcd23008.py and iptalk2mcp.py, which are for running the 16x4 LCD panel and displaying date, time, day and temperature on it. Download

the source code from the DVD or the website and run the code using the command:

```
$ sudo python iptalk2mcp.py
```

The LCD will start showing the IP address, day, date and time along with ambient temperature as shown in Fig. 1.

To make it run every time it boots, add the above line somewhere near the top in /etc/rc.local file.

WebIOPI

WebIOPI has a beautiful interface with MCP230XX. Once you add it in /etc/webioapi/ config file in the [Devices] section, MCP230XX will start showing all its GPIOs in the Explorer. By clicking them in the Explorer window you can make them on or off as shown in Fig. 9. Refer WebIOPI article

published in June issue for more information. ●

The author is an avid user of open source software. Professionally, he is a thermal power expert working as an additional general manager at NTPC Limited

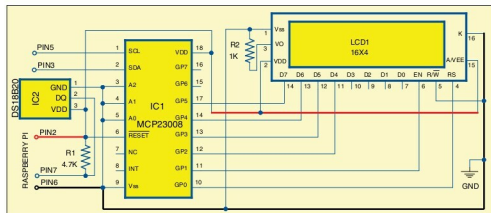


Fig. 7: LCD interface with MCP23008




Fig. 8: DS18B20 temperature sensor interfacing



Fig. 9: WebIOPI



Would You Like More Hands-on Circuits?

We Have Thousands!

VISIT TODAY

electronicsforu.com

If it's electronics, it's here