



Fig. 8: Removing the rim of the rivet



Fig. 9: Drilling the rim



Fig. 10: Removing the end stop



Fig. 11: Removing the limiter



Fig. 12: Removing the limiter



Fig. 13: Removing the knob



Fig. 14: Placing the shaft and end-stop back

10. Now remove the end-stop and put it aside, as shown in Fig. 10.

11. The bumps on the potentiometer also help in preventing a continuous rotation, but breaking these will damage the motor. So follow the technique mentioned below:

The limiter and foil contact are pressed close together. Remove the limiter using pliers or cutter, as shown in Fig. 11.

12. Detach the limiter completely without affecting the shaft. The foil contacts will come off easily. Remove



Fig. 15: Soldering the rivet back

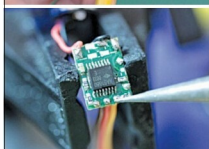
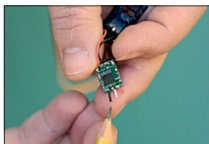


Fig. 16: De-soldering the wires from driver board

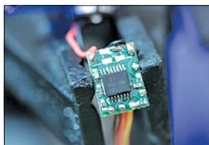


Fig. 17: Soldering the two 2.2k resistor on board

the limiter by snipping it, as shown in Fig. 12.

13. Now remove the knob (mentioned in step 6), as shown in Fig. 13.