

Fig. 5: Inverterselection folder



Fig. 6: Python, wxpython, py2exe for 32-bit




Fig. 7: Python, wxpython and py2exe for 64-bit



Fig 8: build and dist folders



Fig. 9: Files under dist folder



Fig 10: Compressing dist folder

click on inverterApplication.py file, select Edit with IDLE option and press F5 key on the keyboard. You will see the default program output window as shown in Fig. 1.

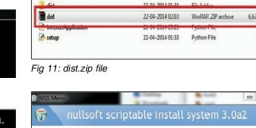


Fig 11: dist.zip file

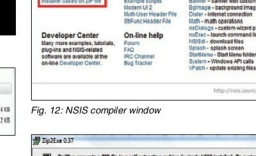


Fig. 12: NSIS compiler window

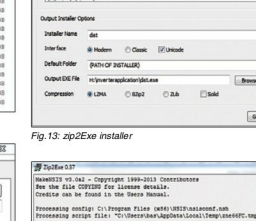


Fig.13: zip2Exe installer

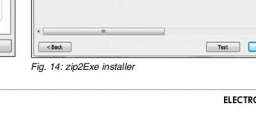


Fig. 14: zip2Exe installer

There are 20 edit boxes on left side of the screen for entering wattages of different electrical loads that you may like to connect to the inverter. You can enter the number of appliances corresponding to each load under Nos column. By default, power factor is 0.7, battery is 12V and back-up time is 3 hours. You can change these parameters as per your requirement.

Most people do not know the wattage of their electrical loads. So, the screen has a reference table on right hand side bottom showing the wattages of some common electrical loads.

Capacity estimations

Let us assume, you have three tubelights (40W each), three ceiling fans (70W each), one TV that consumes 120W and a laptop that consumes 100W. The total power required would be (3×40 + 3×70 + 1×120 + 1×100) = 550 watts.

Calculating inverter capacity. Normally, the inverters are available with VA (voltage x ampere) ratings. To know the VA rating of an inverter, you also need to know the power factor of the inverter. Assuming, the power factor is 0.7, which is true in most cases, the required VA of your