

Fig. 4

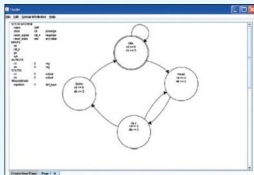


Fig. 8



Fig. 5

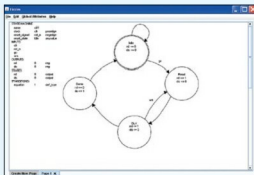


Fig. 9



Fig. 6

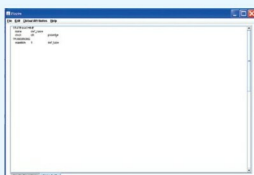


Fig. 10: GUI



Fig. 7

Filling details. Everything in Fizzim is stored as attributes, either attributes on the FSM itself or attributes on individual states and

transitions. So adding inputs, outputs, transition equations, etc is a matter of editing attributes. Also, state and transition object attributes have to be defined first in the global

'states' and 'transitions' attribute menus before they will be available in individual states and transitions.

Select **Global Attributes** -> **StateMachine** from the top menu, which will open a menu as shown in Fig. 5. Change the module name **cliff**, the clock name **clk** and make it a **posedge clk**. Click the **Reset** button to get two more attributes to appear. One is **reset_signal**, change this to **rst_n**, **negeedge**. Set **reset_state** to **Idle** via the pull-down menu and set its type to **anyvalue** (**allzeros** and **allones** will force the reset state to be all zeros or all ones, which we do not require in this example). Click **OK**, now **Idle** state has double rings to indicate that it is a reset state.

Select **Global Attributes** -> **Inputs** from the top menu that will open a menu and click on **Input** button to add inputs as shown in Fig. 6. Click **OK** to exit.

Select **Global Attributes** -> **Outputs** from the top menu, which will open a similar menu, or you can just switch to **Outputs** tab without exiting the menu. Click on **Output** button twice to add two outputs **rg** and

THE COMPLETE MAGAZINE ON OPEN SOURCE

OpenSource

ForYou

Your favourite Magazine on
Open Source is now on the Web, too.

LinuxForU.com

Follow us on Twitter@LinuxForU