

will see another window as shown in Fig. 4.

4. Now press 'Enable' to enable your Raspberry Pi for using SSH. You will immediately see a script running and a confirmation message displayed as shown in Fig. 5.

Now that you have done the setup for Raspberry Pi, move to the other computer from where you would like to remotely access Raspberry Pi.

If you use Windows on your computer, follow these steps:

1. Download open source software 'PuTTY' from <http://www.putty.org>. Install the software by running the downloaded executable file.

PuTTY is an SSH and telnet client, developed originally by Simon Tatham for the Windows platform. This open source software is available with source code and is developed and supported by a group of volunteers.

2. Find out the IP address of Raspberry Pi. Open LX terminal on Raspberry Pi and issue the below-mentioned command:

```
sudo ifconfig
```

You will get information as shown in Fig. 6. Note down the IP address.

3. Run PuTTY on your computer, enter the IP address as shown in Fig. 7 and click 'Open.'

This brings on an SSH window. Ignore all the warnings.

Enter below-mentioned details to get your session up and running at Raspberry Pi:

```
Login: pi
```

```
Password: raspberry
```

Now on entering 'ls' command in the terminal session, you will see all

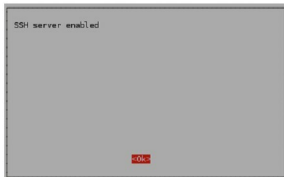


Fig. 5: SSH server-enabled confirmation

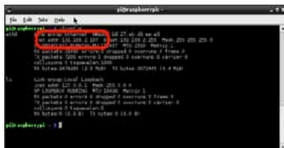


Fig. 6: ifconfig (note the IP address)

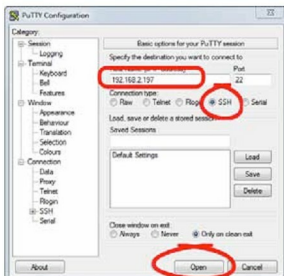


Fig. 7: Enter IP address in PuTTY

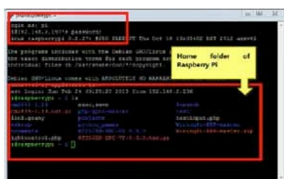


Fig. 8: Successful remote access to Raspberry Pi

the directories of Raspberry Pi (see Fig. 8).

If you use Linux on your computer, follow these steps:

1. Open the terminal and enter command:

```
ssh xxx.xxx.x.xx -l pi
```

Replace xxx.xxx.x.xx with the IP address that you got after 'ifconfig' command. '-l pi' indicates that you want to login as user 'pi' (refer Fig. 9).

2. Ignore any security warning and enter the password. The terminal will change into a terminal session at Raspberry Pi.

3. Enter 'ls' command to verify.

Now you have successfully accessed Raspberry Pi using the terminal session. For experienced Linux users, the terminal session is enough for everything they would like to do on Raspberry Pi, especially electronics interface. But for beginners this can be a problem.

The next way to remotely access Raspberry Pi also allows you to see the GUI of Raspberry Pi just like the way you would see it on Raspberry Pi itself as shown in Fig. 10.

Remote access to Raspberry Pi using VNC

If you want to see the GUI of Raspberry Pi just the way it is and control it with a mouse, VNC (virtual network connection) is a tool just to do that.

In order to use VNC to see the graphical view with a remote, you will have to install some VNC application on Raspberry Pi.

Follow these steps: