

Fig. 9: Remote session using Linux



Fig. 10: Remote session using VNC viewer



Fig. 11: Install tightvncserver using SSH terminal session on Raspberry Pi

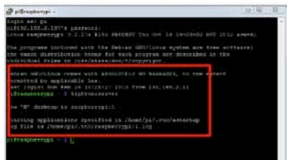


Fig. 12: Run tightvncserver

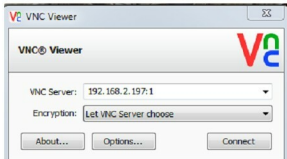


Fig. 13: VNC Viewer

1. Open SSH terminal and enter below-mentioned commands to install 'tightvncserver' on Raspberry Pi (refer Fig. 11):

```
sudo apt-get update
sudo apt-get install
tightvncserver
```

Type 'Y' when prompted for installation.

2. Run VNC server by entering the following command in SSH session (refer Fig. 12):

```
tightvncserver
```

This prompts you to put a new password and confirm it. Say 'no' to read only password when prompted.

Now VNC server is running on Raspberry Pi. Let us try connecting to it from the desktop computer:

3. Install some VNC client like VNC viewer from 'www.realvnc.com', which works well with 'tightserver.'

4. Run VNC viewer and enter the IP address as shown in Fig. 13:

5. Use append: 1 to indicate the port. Click 'Connect.'

6. Ignore all the warnings.

7. Enter the password selected in step 2 and press 'Connect.'

You will immediately see a window as shown in Fig. 10, which is actually Raspberry Pi accessed from your desktop. Now you can do everything that you would like to do with Raspberry Pi with the comfort of your own desktop/laptop computer. ●

The author is working as an assistant manager at Samtel Avionics & Defence Systems

## Raspberry Pi Camera

High-Definition video camera for Raspberry



RS Stock No. 775-773

## Raspberry Pi

Model A

Model B



RS Stock No. 756-8317

RS Stock No. 756-8301

Order now for just

Order now for ju

₹ 2175/-

₹ 2950/-

Available on  
Next Day Delivery

www.rsindia.com

Toll Free: 1800-180-7746



RS Components &  
Controls (India) Ltd

\*Taxes c

