



Fig. 4: Wi-Fi config utility

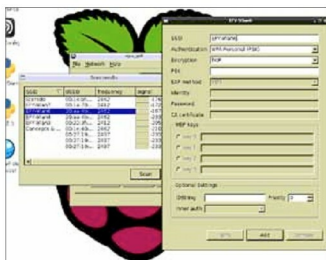


Fig. 5: Connecting to a network

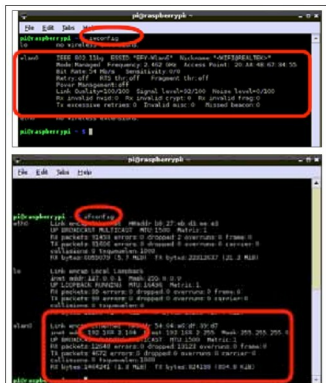


Fig. 6: iwconfig and ifconfig

network will start working.

To make it a 'dhcp' again, you have to open network interface file once more, replace the word 'static' with 'dynamic' and then remove those three lines.

However, this is not sufficient to open www.google.com. You need to set up a network's name server to be able to convert www.google.com to its IP address like '74.125.226.176,177.178,179,180'.

To do this, run 'nano/etc/init.d/resolv.conf' command using the terminal window and then enter the name servers' addresses one after the other, until you finish writing them all:

```
nameserver 192.168.1.1
nameserver 192.168.1.2
nameserver 192.168.1.3
```

Save this, exit and restart network by 'sudo/etc/init.d/networking restart'.

On the terminal window, type 'ping www.raspberrypi.org' and hit 'enter.' If a pageful of information follows, the network has started.

Open 'dillo' or 'Net-Surf' browser, and in the URL window type 'www.google.com.' The page should load now as shown in Fig. 3. However, there may be a proxy server in between. In that case, open the browser, go to 'setup→LAN setting,' and then enter the proxy IP address and port address.

Wireless LAN

The USB hardware for Wi-Fi is not very ex-



Available on
Next Day Delivery

Raspberry Pi Model A



RS Stock No. 756-8317

Order now for just ₹ 2175/-*

Raspberry Pi Model B



RS Stock No. 756-8308

Order now for just ₹ 2950/-*

*Taxes extra

www.rsindia.com

Toll Free: 1800-180-7746



RS Components &
Controls (India) Ltd.

DESIGNSPARK

Find out more
useful resources on
Raspberry Pi at,
www.designspark.com