

and go to step 2. Version 0.1 did not have the uninstaller, so it needs to be un-installed manually using the commands given below:

```
$ rm -rf $HOME/Raspberry_Control
$ sudo insersvc -r rpc_shellinaboxd
$ sudo rm /etc/
init.d/rpc_
shellinaboxd
```

Also remove
 '/home/pi/Rasp-
 berry_Control/
 core/rpc_export'
 line form '~/.
 bashrc' file.

Fig. 5: GPIO Control screen

2. Download the latest version

of Raspberry Control software from http://www.lukasz-skalski.com/index.php/component/option,com_phocadownload/Itemid,90/id,1/view/category/

3. Using 'cd' command navigate to the location where you have downloaded the file and extract the tar.gz archive using the following command (see Fig. 3):

```
$ tar xvfz rpc_installer-2013-03-24.tar.gz
```

4. Now go to the extracted directory with 'cd rpc_installer' command and run the installation script (see Fig. 4):

```
$ ./rpc_utils --install (without sudo!)
```

5. Rebooting the Raspberry Pi is highly recommended after this installation.

6. The last step is to download and install Raspberry Control (version 0.2) application on your Android device from Google Play.

Once all the setup is done, you can immediately connect your phone to Raspberry Pi and start playing around with it. In the next section we describe the various features of Raspberry Control.

GPIO monitoring and control

Once logged in, press on the GPIO symbol shown in Fig. 1. GPIO Control screen will appear as shown in Fig. 5. You can use this panel to monitor and control various GPIO pins. Here BCM GPIO numbering scheme is used. You can refer to Fig. 6 for the relationship

between physical pin numbers and GPIO numbering.

Now you can select which GPIO should be available in GPIO Control function on the Android device. You can do it in '/etc/raspberry_control/rpc_conf' file under 'GPIO_EXPORT' section. If you select 'yes' for a GPIO, it will be available in

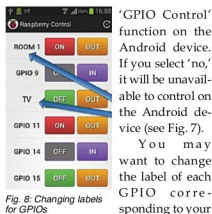


Fig. 8: Changing labels for GPIOs



Fig. 9: Remote session

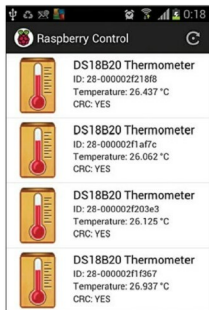


Fig. 10: Temperature monitoring

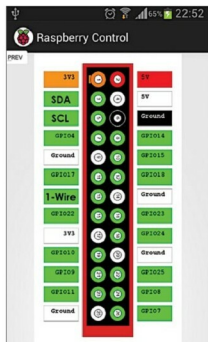


Fig. 6: GPIO numbering

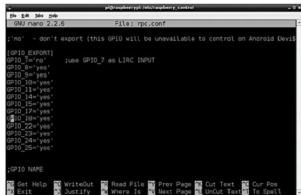


Fig. 7: Configuring GPIO availability for control