

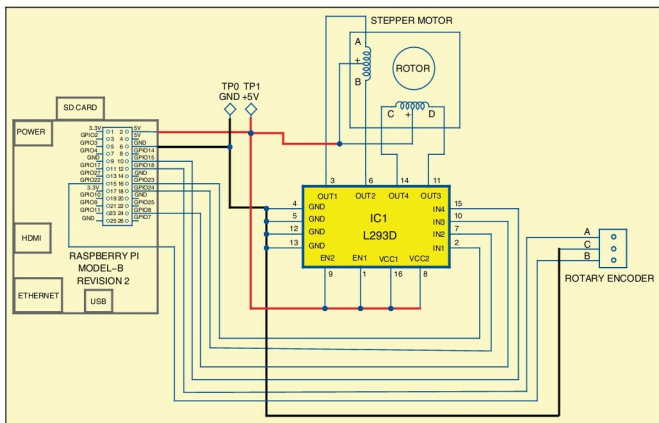


Fig. 3: Circuit connection of the rotary encoder with Raspi

EFY Note

The source code of this project is included in this month's EFY DVD and is also available for free download at source.efymag.com

download at github.com/WiringPi/WiringPi-PHP

First, install php5-dev before installing WiringPi as given below:

```
sudo apt-get install php5-dev
```

Now use git to install wiringpi.php

```
$ git clone https://github.com/WiringPi/WiringPi-PHP.git
$ cd WiringPi-PHP
$ git submodule update -init
$ sudo ./build.sh
```

```
$ sudo ./install.sh
$ cp wiringpi.php /var/www/
```

WiringPi is installed on Raspi and also copied to /var/www directory. But to get it inside PHP, load it in wiringpi.ini file.

Open wiringpi.ini file in /etc/php5/conf.d/ and write the following lines on it:

```
$sudo nano /etc/php5/conf.d/wiringpi.ini
extension=wiringpi.so
wiringpi.piniadapttype=PINS
```

Save the file and restart apache.

```
/etc/init.d/apache2 restart
```

Run the following command to check whether WiringPi module has been loaded:

```
php -m | grep wiringpi
```

After installing WiringPi for PHP, run rotary-server.php code, the main program of this project, by issuing following command:

```
$ sudo php -f rotary-servo.php
```

Rotate the shaft of the rotary encoder in clockwise and counter-clockwise directions. You would see the stepper motor rotate in clockwise and counter-clockwise directions, respectively. ●



Somnath Bera is an avid user of open source software. Professionally, he is a thermal power expert and works as additional general manager at NTPC Ltd

**Know the Leading Players
in Every Sector of the
Electronics Industry**

www.electronicseb2b.com

Log on to www.electronicseb2b.com and be in touch with the Electronics B2B Fraternity 24x7

**ACCESS ELECTRONICS
B2B INDUSTRY WITH A**

CLICK OF A BUTTON