

decade counter IC3. If, for example, there are only two cameras connected

to the video switcher, switch S2 of DIP SW1 switch is closed. That connects

the third output Q2 to reset pin 15 of decade counter CD4017. When IC3

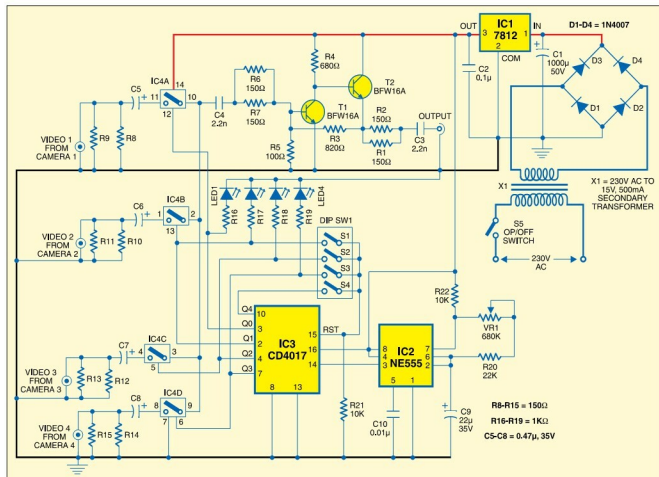


Fig. 2: Circuit diagram of video switcher

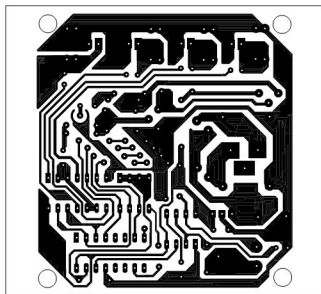


Fig. 3: A single-side, actual-size PCB layout for video switcher

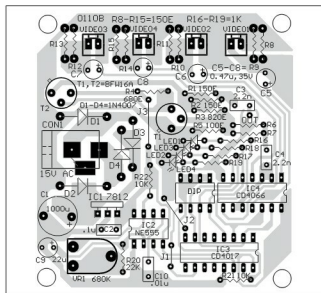


Fig. 4: Component layout for the PCB