


HIOKI



For more details

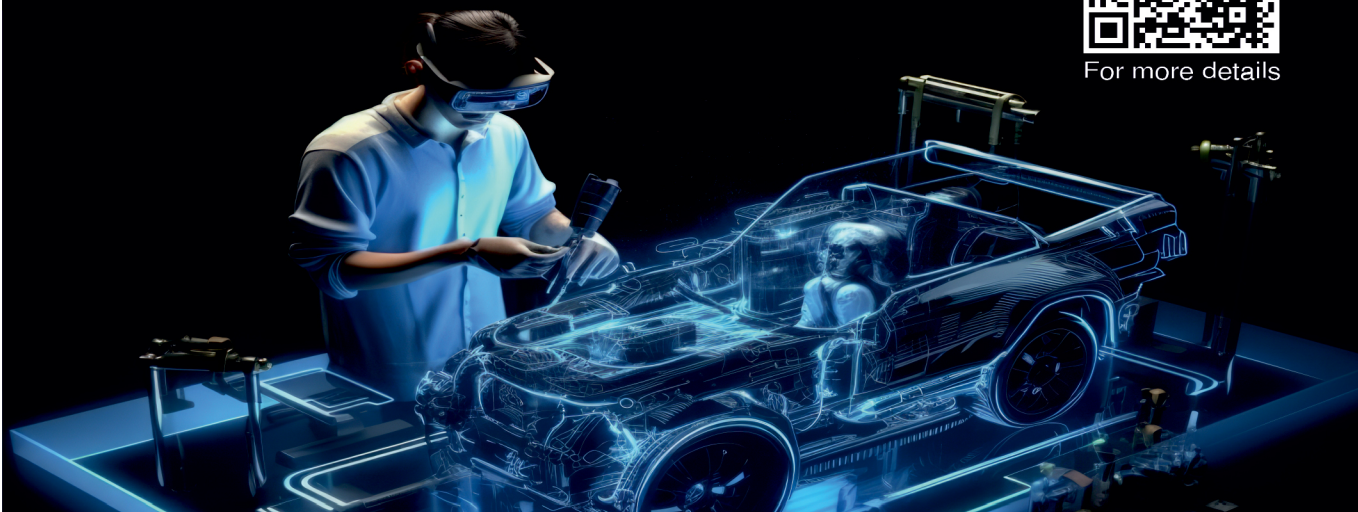

★ HIOKI Guide for Safe Electrical Testing of Electric Vehicle (EV) Maintenance, Inspection and Service ★

⚙️ Zero-Voltage Measurement

To check that the BEV is not powered.

⚙️ Insulation Measurement

To check that there are no insulation defects.

⚙️ Temperature Measurement


To check HV battery temperature.

⚙️ Equipotential Bonding Test

To check that all exposed conductive parts such as the chassis of the vehicle are equipotential or at the same voltage.



4 Essential Tools for EV High-voltage Shutdown and Reinitialization

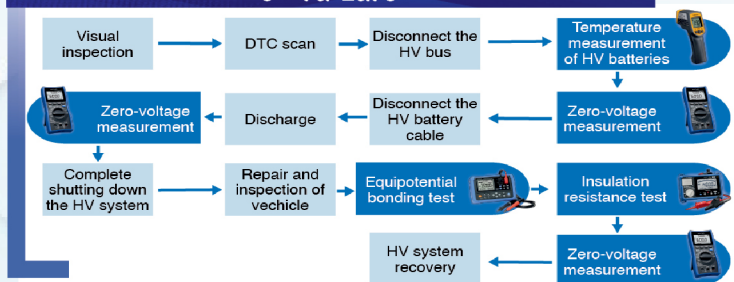

Contact Us

Beyond Measure