


Electronics Projects Vol. 26 is the latest volume in the series, available in digital form.

It is a compilation of 21 construction projects and 71 circuit ideas published in Electronics For You magazine.

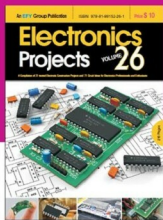

This collection of tested circuit ideas and construction projects in a handy volume would interest all classes of electronics enthusiasts—be they students, teachers, hobbyists or professionals!

Electronics Projects Vol. 26 is available on the following digital magazine stores:

- www.lulu.com
- www.magzter.com
- Createspace.com
- www.readwhere.com



Fig. 3: Installing Raspicam Remote app

cated to the GPU.

Note. Selecting raspi-config utility tool provides a way of doing initial configuration of Raspi. Although, it can be run any time.

Click on Finish when you are done making changes. You will be asked whether you want to reboot or not. When used for the first time, it is best to reboot the system.

To test that the system is installed and working, and to take a photo with your Raspi camera module, type the following command:

```
$ raspistill -o image.jpg // image is the name of your image
```

raspistill is a command-line application that allows you to capture images with your camera module.

Setting up Raspicam Remote app. You may download the app from <https://play.google.com/store/apps/details?id=com.pibits.rasberryremotecam>

Install the app on the Android device on which you want to see remote video.

Testing the surveillance camera

Raspicam Remote app. Open Raspicam Remote app and you will



Fig. 4: Remote video display in multiple phones

get an initial view to provide login details such as IP address, username and password as shown in Fig. 3. It uses default login account details and SSH port.

You will only need the IP address if you have the default installation in place. You can even access your camera over the Internet if you enable port forwarding for port 22.

IP address on your Raspi.

Double-check to see if your Raspi is connected to the network by typing the following command:

```
$ sudo ifconfig
```

If Raspi is connected to the network, it would have been given an IP address, such as 192.168.3.113 (yours will be different).

Type the IP address of your Raspi as shown in Fig. 3, and refresh the screen until your Raspi IP address is displayed on the screen. Select your Raspi IP address to connect and view the remote display straight-away.

Alternatively, you can set different settings—flip, mirror, rotate, 3D, zoom, negative, solarise, sketch, denoise, emboss, oil paint, hatch, gpen, water colour, film and so on. Also, you can use multiple phones to observe remote video simultaneously (Fig. 4). **EFY**



Biswajit Das is an electronics hobbyist