

```

Ubidots_Temperature_and_humidity_email | Arduino 1.8.5
File Edit Sketch Tools Help

Ubidots_Temperature_and_humidity_email

#include "UbidotsMicroESP8266.h"
#include "DHT.h"

#define DHTPIN D2
#define DHTTYPE DHT11
#define TOKEN "A1E-rbFgjGGF1UhuHNjHJcjKWnSLpDdYgA"
#define ID_1 "5a952060c03f9713dc6506bb"
#define ID_2 "5a95204fc03f9713dc6506b9"
#define WIFISSID "Redmi"
#define PASSWORD "subham12"

Done uploading
..... [ 50% ]
..... [ 100% ]
1-2
Type here to search
Windows D1 R1: 80 MHz, 4K (1M SPIFFS), 02 Prebuilt (M55-D55), Disabled, None, 421000 mC
3:48 PM
3/27/2018

```

Fig. 3: Header files to be included in the source program

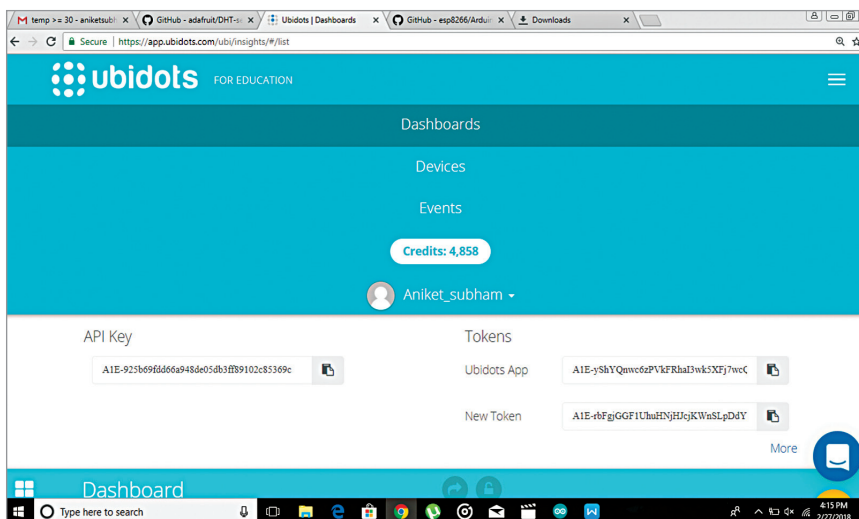


Fig. 4: Ubidots platform

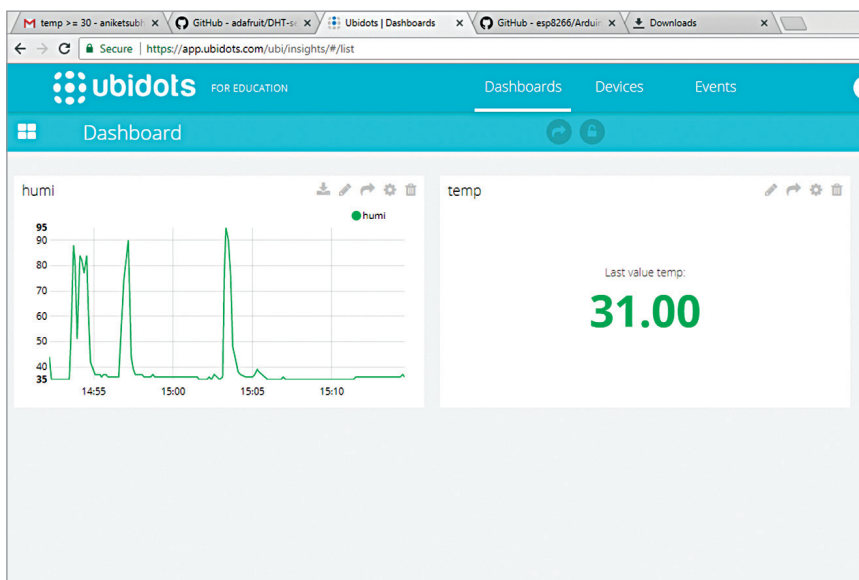


Fig. 5: Monitoring humidity and temperature data in Dashboard of Ubidots

(NC), and ground, respectively. The output signal is in discrete form with a voltage range of 3.5V to 5.5V DC. In this project, WeMos D1 is interfaced with DHT11 to receive the discrete values of temperature and humidity and upload these values on Ubidots platform. DHT11 is integrated with a high-performance 8-bit microcontroller.

Ubidots. This website provides the users with a platform to create, develop, and deploy their IoT solutions. Typical client experiences begin with the Educational License to prototype projects and get a feel of Ubidots. Then one may migrate to Ubidots for Business once a solution has to be refined or needs a more robust functionality. With Ubidots Education License and credits, users can create IoT applications and explore deployment at no cost.

Once a solution is determined and a proof of concept (PoC) or deployment is needed, Ubidots for Business can be deployed. With additional features, great reliability, and prompt support, Ubidots for Business powers applications from three devices to over 7,500 devices. Ubidots receives the temperature values and represents it in forms like metric, graphical, etc. If the temperature exceeds the set point, an email is sent to the concerned person.

Procedure

The WeMos D1 IoT development board can be set up by following the steps below.

1. Download Arduino IDE software from the link <https://www.arduino.cc/> on a computer.
2. Download and install the CH340G USB driver.
3. Version 1.8.5 of the Arduino IDE introduced official support for adding third party boards to the new Board Manager. So, go to <https://github.com/esp8266/Arduino.git> where you will find a green colour button for 'Code.' Click on this button to download the zip file (Download ZIP).
4. Install and open the Arduino IDE software. Go to