

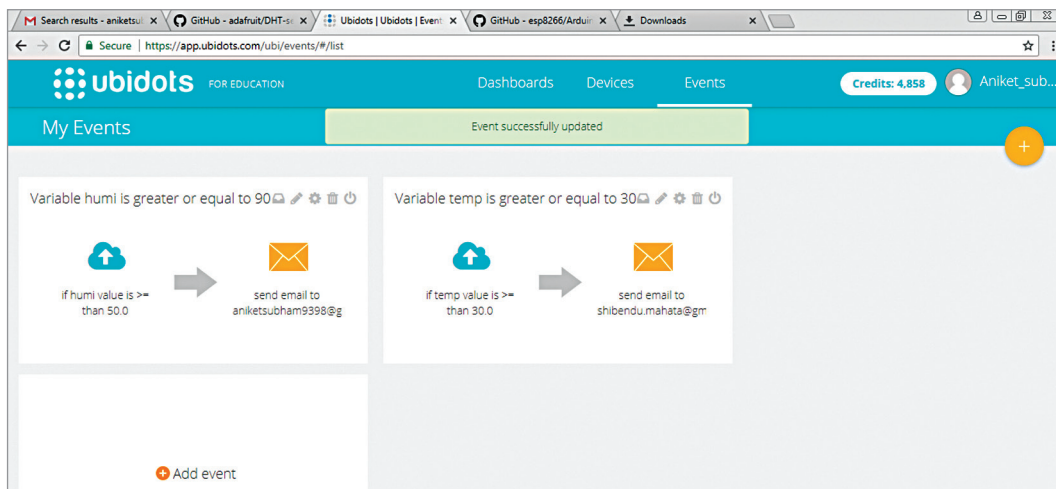


Fig. 6: Setting the conditions for email alert in Events section of Ubidots

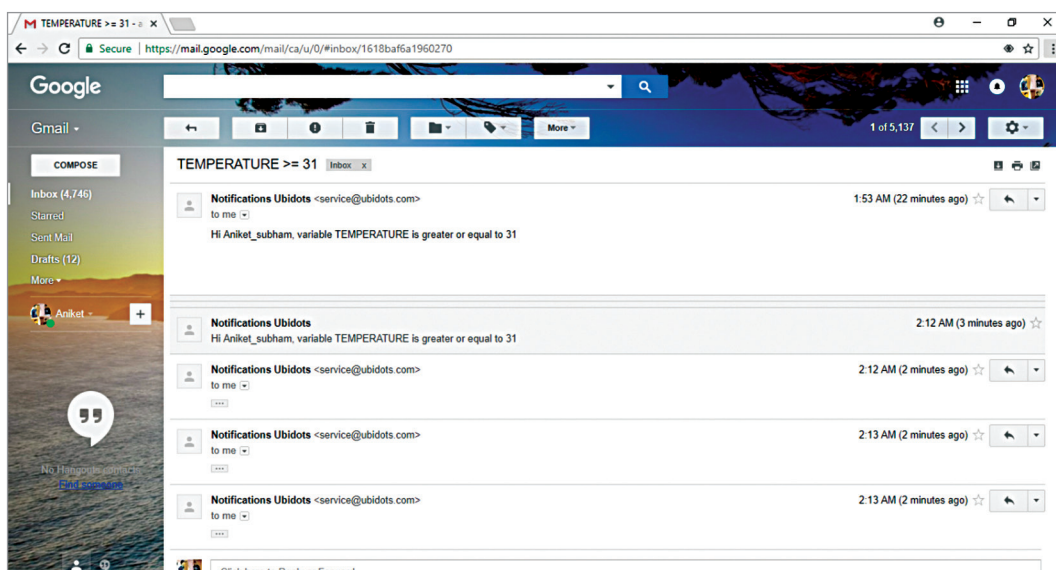


Fig. 7: Email notification showing that process temperature has exceeded the set-point

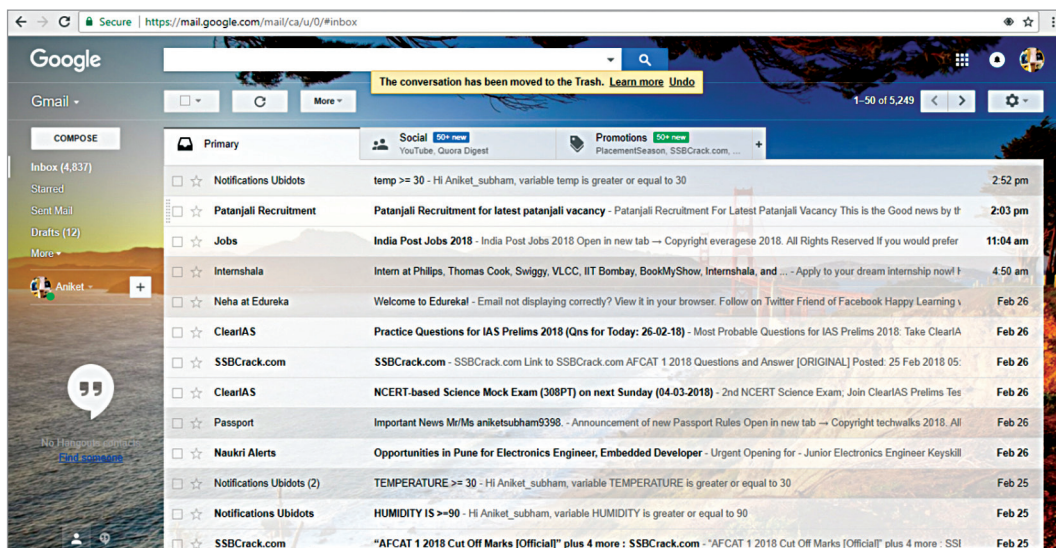


Fig. 8: Email notifications in the inbox

Sketch→Include library→add .ZIP library. Add the downloaded zip file from your computer drive or files.

5. Go to Files→Preferences. Copy the link http://arduino.esp8266.com/stable/package_esp8266com_index.json and paste it in the additional board manager in the URL text box and press 'ok.'

6. Now go to the Tools→Board→Board Manager. In the search box, type *esp8266* and select ESP8266 Community to install it and then close.

7. To update the board, go to the Tools→Board→Scroll down and choose your WeMos D1 board category and update your board.

8. Download the zip files (*ubidots-esp8266-master.zip* and *DHT-sensor-library-master.zip*) for Ubidots and DHT sensor.

9. Add the two header files in the source program *Ubidots_temperature_and_humidity_email.ino* as shown in Fig. 3.

10. Now go the Ubidots platform and sign up. Next, in the right-hand side upper corner, click on the three dash lines icon, select API credentials and token.

11. Copy the token. Paste it in the program source