

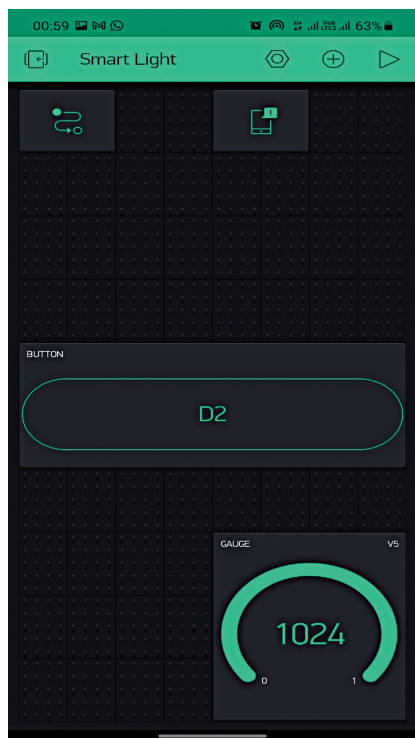


Fig. 12: Widgets arranged on control panel

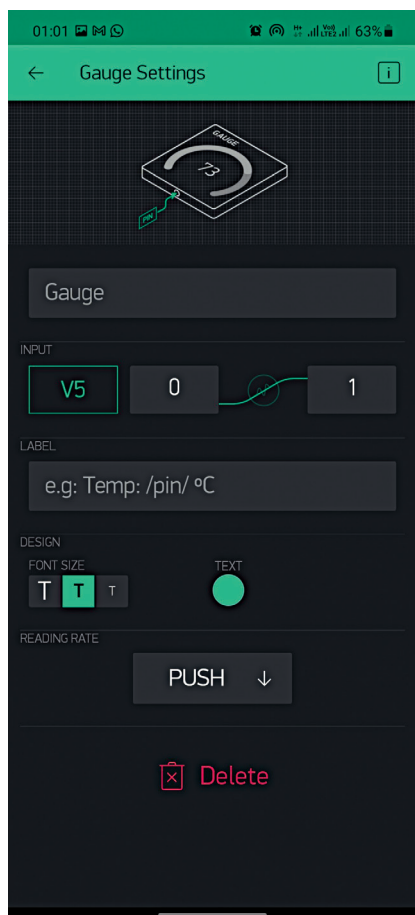


Fig. 13: Gauge settings

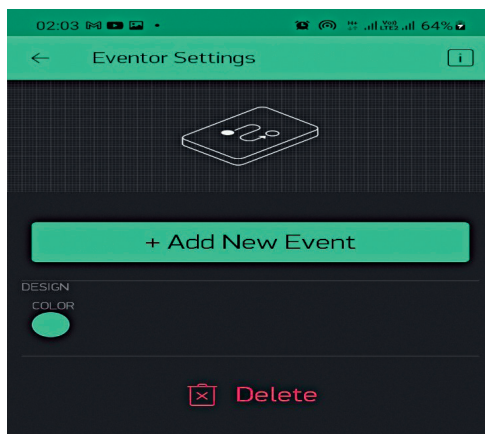


Fig. 14: Eventor settings window

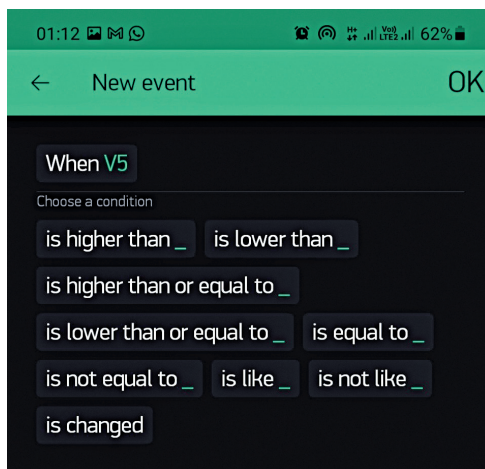


Fig. 15: New event window

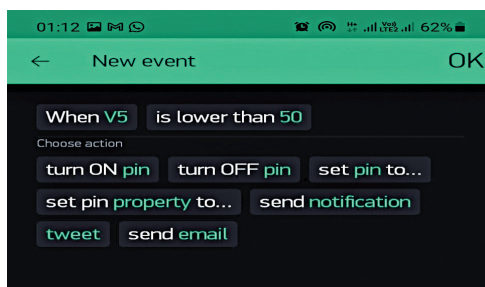


Fig. 16: Choosing the lower value as 50

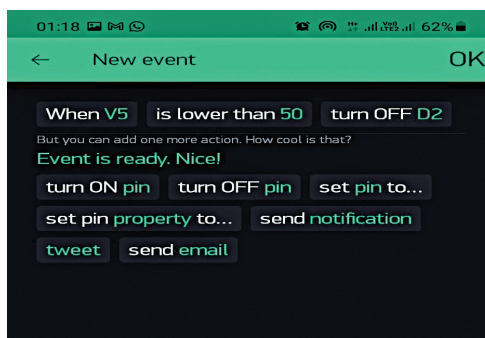


Fig. 17: Setting digital pin D2 to turn off

App Store.

2. Log in if you have Blynk account, or just sign up to create a new account as shown in Fig. 6.

3. Select the New Project option as shown in Fig. 7.

4. You will see a 'Create New Project' screen as shown in Fig. 8. Give a project name, say, LampMate, and choose your device as NodeMCU. You will see another option asking for Connectivity. Set it as Wi-Fi and click on Create button.

5. Now you will see a pop-up window as shown in Fig. 9. Authentication token will be sent to your registered email. The generated token is used in the Arduino codes for NodeMCU connection with the Internet.

6. Click on the + (plus) icon on top right corner of the screen as shown in Fig. 10.

7. You will see a widget box as shown in Fig. 11. Add all the necessary widgets such as Button, Gauge, Notification, and Eventor.

8. Arrange the widgets in the desired manner as shown in Fig. 12.

9. To read the IR sensor values, you need Gauge widget. For that click on Gauge, select the digital pin as V5 from the INPUT option as shown in Fig. 13.

10. After all the above-mentioned steps, click Play button on top right side of the control panel. Next, check the maximum and minimum readings of the sensor on the Gauge widget by placing your hand in front of the IR sensor. In this case, the maximum value is set to 1024 and the minimum to 40.

11. Click on Eventor button to add new event by clicking + Add New Event as shown in Fig. 14.

12. Follow the steps to setup the new events.

13. You will see an option to set Vpin value. Click on that and select V5 option and then click OK as shown in Fig. 15.