

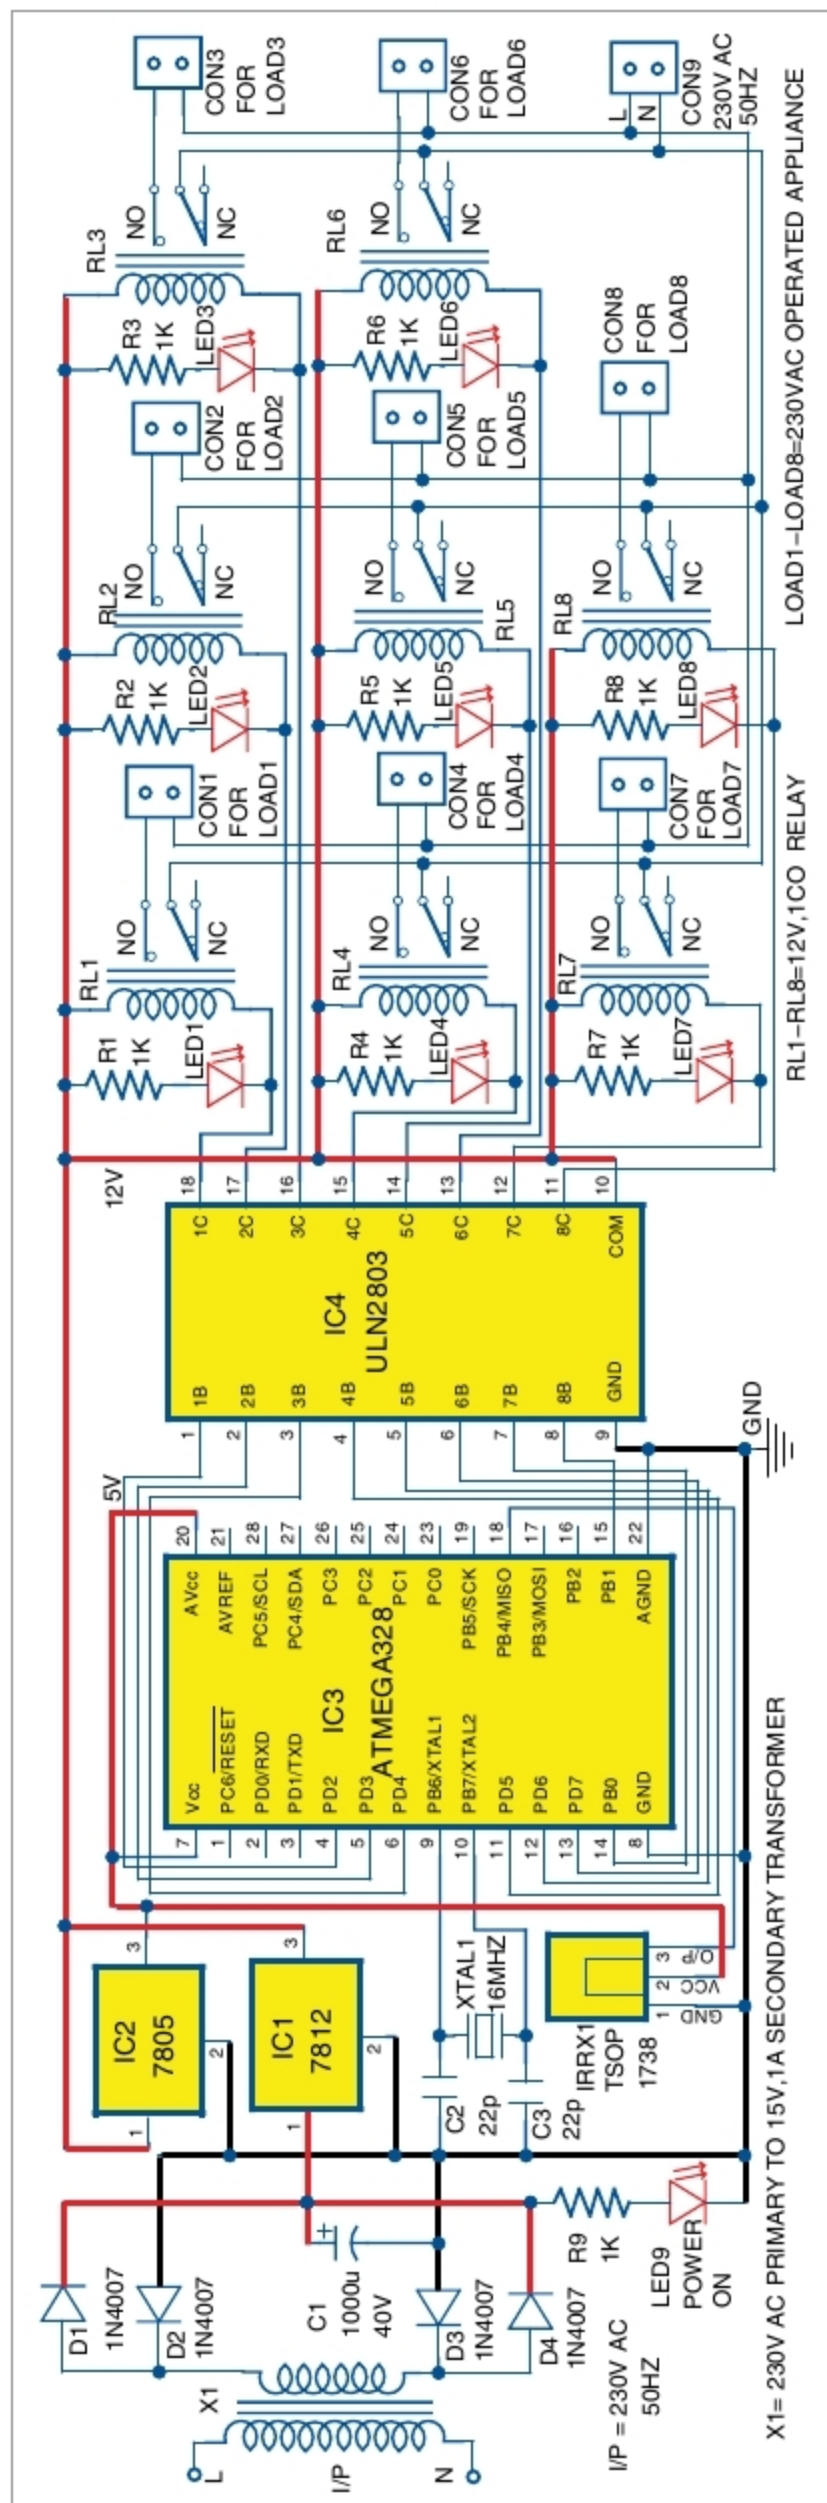


Fig. 3: Circuit diagram of the device controller

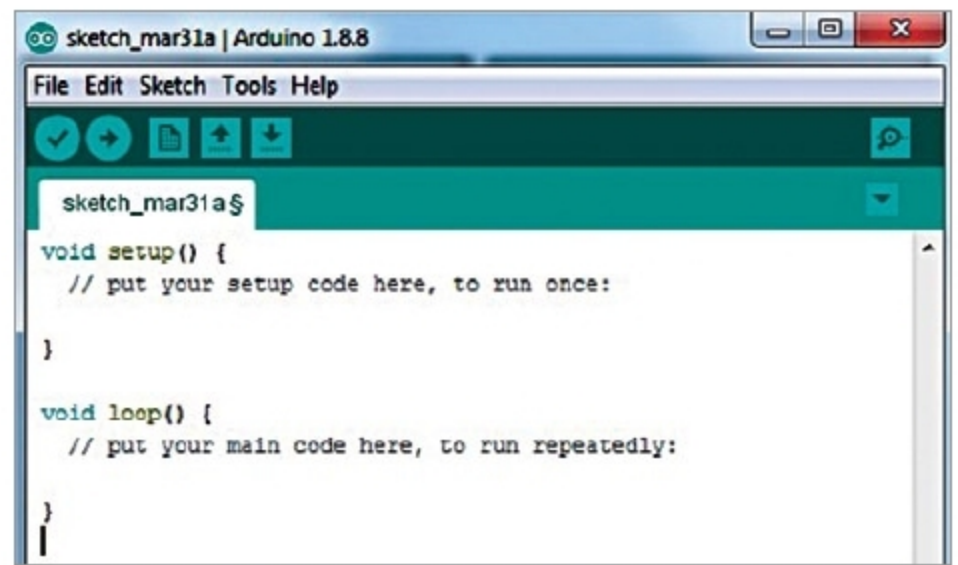


Fig. 4: Arduino sketch window



Fig. 5: TSOP1738 connection with Arduino Uno

Remote Control Code and Device Status

IR Remote key/button	Decode	Relay	Load/device
1	16748655	Energised	Load1 on
2	16758855	Energised	Load2 on
3	16775175	Energised	Load3 on
4	16756815	Energised	Load4 on
5	16750695	Energised	Load5 on
6	16767015	Energised	Load6 on
7	16746615	Energised	Load7 on
8	16754775	Energised	Load8 on
Power on/off	16773135	De-energised	All loads off

3. Select IR Remote (By Cristiano Borges) and click on Install. (This will install all IR libraries in Arduino IDE software.)

Decoding IR remote

Every remote has a different code corresponding to each key/button. In order to use your IR remote in this project, you need to

decode the code of each button. For that, first open the IR decode.ino code from the Arduino sketch window.

To use this code you need a hardware circuit such as the one shown in Fig. 5. Here, output pin 3 of TSOP1738 module is connected to pin 12 of Arduino Uno.

Compile the code and upload it to Arduino Uno board. Point the IR remote towards the TSOP1738 module and press any button on the IR remote. You can see the decoded value of each button on serial monitor of Arduino IDE. (Please note, the decoded values may differ from remote to remote.)

The decoded values observed