



Entity Explorer Right-Click Menu

DFC

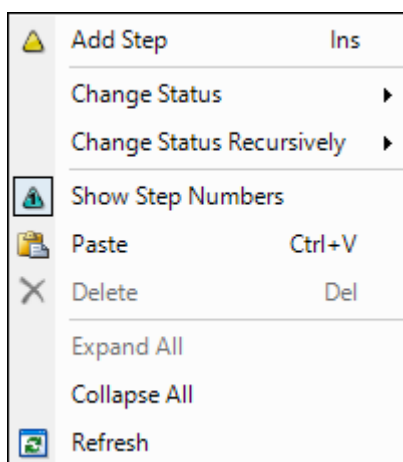

Option	Description
Add Step	Adds a new step to the DFC.
Change Status	Changes the status of the DFC. For more information, see Change the Status of an Entity .
Change Status Recursively	Changes the status of the DFC and its child entities. The recursive status change works only for the prototype, development in progress, or active statuses. For more information, see Change the Status of an Entity .
Show Step Numbers	Shows or hides numbers displayed next to steps in Entity Explorer.
Paste	Inserts the last copied element of the step or function navigation from the clipboard into the entity workspace and the Entity Explorer tree .
Expand All	Expands the list of elements under the selected DFC.
Collapse All	Collapses the list of elements under the selected DFC.
Refresh	Refreshes the workspace.

Step

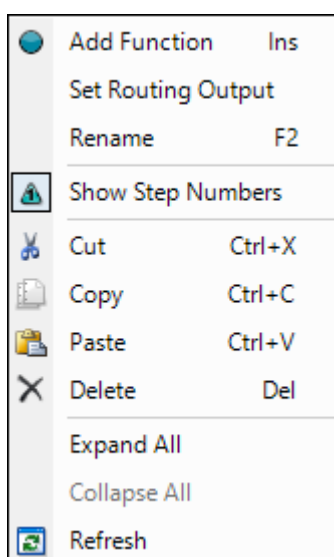

Option	Description
Add Function	Adds a new function to the step. By default, the type of new function is Input to Output .
Set Routing Output	Enables setting a function output that will be used as an output routing of a DFC step.
Rename	Changes the name of the selected step.
Show Step Numbers	Shows or hides numbers displayed next to steps in Entity Explorer.
Cut	Copies the selected element of the step or function navigation to the clipboard and removes it from the entity workspace and the Entity Explorer tree.
Paste	Inserts the last copied element of the step or function navigation from the clipboard

	into the entity workspace and the Entity Explorer tree .
Expand All	Expands the list of elements under the selected step.
Collapse All	Collapses the list of elements under the selected step.
Refresh	Refreshes the workspace.

Function

	Add Input	Ctrl+Shift+I
	Add Output	Ctrl+Shift+O
	Add Pair	Ctrl+Shift+R
	Rename	F2
	Open Sub-DFC	
	Show Links and Task Permissions	
	Show Step Numbers	
	Cut	Ctrl+X
	Copy	Ctrl+C
	Paste	Ctrl+V
	Delete	Del
	Expand All	
	Collapse All	
	Refresh	

Option	Description
Add Input	Adds an input to the selected function.
Add Output	Adds an output to the selected function.
Add Pair	Adds both the input and output mapped together to the selected function. This option is available only for the Input to Output function type.
Rename	Changes the name of the selected function.
Open Sub-DFC	Opens a DFC that is linked as a sub-DFC in a new tab. This option is available only for the Sub-DFC function type.
Show Links and Task Permissions	Shows or hides added links to specifications, documents, components, work centers, and resources, as well as task permissions to skill, role, employee, and employee class. Employee class is defined by the resource class of the Person type.
Show Step Numbers	Shows or hides numbers displayed next to steps in Entity Explorer.
Cut	Copies the selected element of the step or function navigation to the clipboard and removes it from the entity workspace and the Entity Explorer tree.
Copy	Copies the selected element of the step or function navigation to the clipboard.
Paste	Inserts the last copied element of the step or function navigation from the clipboard into the entity workspace and the Entity Explorer tree .

Delete	Removes the selected element from the entity workspace and the Entity Explorer tree.
Expand All	Expands the list of elements under the selected function.
Collapse All	Collapses the list of elements under the selected function.
Refresh	Refreshes the workspace.

Input ↻/Output ↻

	Rename	F2
	Show Links and Task Permissions	
	Show Step Numbers	
	Create External Input	
	Cut	Ctrl+X
	Copy	Ctrl+C
	Paste	Ctrl+V
	Delete	Del
	Refresh	

Option	Description
Rename	Changes the name of the selected input or output.
Show Links and Task Permissions	Shows or hides added links to specifications, documents, components, work centers, and resources, as well as task permissions to skill, role, employee, and employee class. Employee class is defined by the resource class of the Person type.
Create External Input	Exposes an input as the DFC external input. This option is available only in case of an input of the source User (). External inputs can be used to pass values to a DFC that is being used as a sub-DFC, or when it is invoked from Machine Integrator, Job Scheduler, or XML Manager.
Show Step Numbers	Shows or hides numbers displayed next to steps in Entity Explorer.
Cut	Copies the selected element of the step or function navigation to the clipboard and removes it from the entity workspace and the Entity Explorer tree.
Copy	Copies the selected element of the step or function navigation to the clipboard.
Paste	Inserts the last copied element of the step or function navigation from the clipboard into the entity workspace and the Entity Explorer tree .
Delete	Removes the selected element of the step or function navigation from the entity workspace and the Entity Explorer tree.
Refresh	Refreshes the workspace.

